

8265/8290/8365/8390 Wide Format Color Printer User Guide





COPYRIGHT NOTICE

COPYRIGHT © 2008 Xerox. All rights reserved.

This document may not be reproduced by any means, in whole or in part, without written permission of the copyright owner.

This document is furnished to support the Xerox 8265/8290/8365/8390 Wide Format Color Printer Series. In consideration of the furnishing of the information contained in this document, the party to whom it is given, assumes its custody and control and agrees to the following:

The information herein contained is given in confidence, and any part thereof shall not be copied or reproduced without written consent of Xerox.

This document or the contents herein under no circumstances shall be used in the manufacture or reproduction of the article shown and the delivery of this document shall not constitute any right or license to do so.



WEEE regulations Environmental information Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.




TABLE OF CONTENTS

1	Safety	Instructions	1
	1.1 Int	troduction	1
	1.2 Wa	arnings, Cautions and Notes	1
	1.3 lm	portant Safety Instructions	1
	1.4 Wa	arning Labels	4
		Handling the Warning Labels	
	1.4.2		
2	Printer	r Overview	
	2.1 Fe	eatures	9
	2.2 Pa	art Names and Functions	10
	2.2.1	Front of Printer	10
	2.2.2	Rear of Printer	11
	2.2.3	Position and Function of the Heating Elements	12
	2.2.4	Printer Control Panel	
	2.2.5	Winder (Front)	15
	2.2.6	Unwinder (Rear)	
	2.2.7	Winder/Un-winder Control Panel	
	2.2.8	Winder/Un-winder Operation Labels	17
3	Printer	r Setup	19
	3.1 Tu	Irning the Printer Power ON/OFF	19
		Turning the Power ON	
		Turning the Power OFF	
		ırning the Winder/Un-winder Power ON / OFF	
		onnecting the Network Interface	
		edia Handling	
		Loading Sheet Media	
		Loading Roll Media	
	3.4.3	Setting Media Type	
		est Printing	
	3.5.1	Setup List	
	3.5.2	Nozzle Check	
	3.5.3	Colour Palette	33
	3.5.4	Maintenance Record	
4		r Operation	
		inter Status	
	4.1.1	Normal	
	4.1.2	Setting Menu Display	
	4.1.3	Changing the Printer Status	
		sing Media	
	4.2.1	Media Type	
	4.2.2	Cautions on Handling Media	
	4.2.3	Precaution on Storing Media	
	4.2.4	Media Printing Area	
		enu Overview	

	4.3.1	Setup Menu 1/7	41
	4.3.2	Setup Menu 2/7	53
	4.3.3	Setup Menu 3/7	63
	4.3.4	Setup Menu 4/7	67
	4.3.5	Setup Menu 5/7	76
	4.3.6	Setup Menu 6/7	81
	4.3.7	Setup Menu 7/7	83
	4.4 O	perating from the Control panel	84
	4.4.1	Feeding Media	
	4.4.2	Controlling the Heater Elements	85
	4.4.3	Operating the Pressure Rollers	
	4.4.4	Print Mode Check	
		ontrol Panel During Printing	88
	4.5.1	, 5	
	4.5.2	Heaters are Ready during Printing	
		perations After Printing	
		Cutting Media	
5		leshooting	
		troduction	
		ailures and Malfunctions of the Printer	
		ror Messages	
	5.3.1	Status Messages	
	5.3.2	Error Message Display and Solutions	
	5.3.3	Data Error Display and Solutions	
	5.3.4	Command Error Display and Solutions	
	5.3.5	Error Requiring a Printer Restart	
_		hen Media Jams Occur	
6		enance	
		troduction	
		265/8290 Periodic Maintenance	
		Weekly Maintenance	
	6.2.2	Bi-weekly Maintenance	
		Monthly Maintenance	
	6.2.4	Semi-Annual Maintenance	
	6.3 83 6.3.1	365/8390 Periodic Maintenance	
	6.3.2		
	6.3.3	Weekly Maintenance Bi-weekly Maintenance	
	6.3.4	Monthly Maintenance	
		uthorized Service Procedures	
		eplacing Consumables	
	6.5.1	Replacing Ink Cassettes	
	6.5.2	Replacing the Cutting Blade	
	6.5.2	Replacing the Waste Tank	
		eaningeaning	
	6.6.1	Cleaning the Outer Case	
	0.0.1	Oleaning the Outer base	141

	6.6.2	Cleaning the Inside of the Printer	128
		B Head Cleaning	
	6.7	LongStore Procedure	131
		Ready the Printer for LongStore	
		Starting up after a LongStore	
7		ıstments	
	-	Uni-Directional Adjustment	
		Bi-Directional Adjustment	
		Step Adjustment	
		Print the Dist.Check Test Pattern	
	7.3.2	2 Evaluate the Dist. Check Test Pattern	138
	7.3.3	Modify the Step Adjust Printer Setting	139
8		endix	
		Product Specifications	
		Network Interface Specifications	

This page has been intentionally left blank.

1 SAFETY INSTRUCTIONS

1.1 INTRODUCTION

This chapter explains the meaning of safety terms for personnel who operate this equipment, important safety instructions, and the positions of the warning labels.

■ Important

Be sure to follow all instructions and warnings in this manual when using the equipment.

1.2 WARNINGS, CAUTIONS AND NOTES

Safety terms in this manual and the contents of warning labels attached to the printer are categorized into the following three types depending on the degree of risk (or the scale of accident). Read the following explanations carefully and follow the instructions in this manual.

Safety terms	Details
	Must be followed carefully to avoid death or serious bodily injury
	Must be observed to avoid bodily injury (moderate or light) or damage to your equipment
	Contains important information and useful tips on the operation of your printer

1.3 IMPORTANT SAFETY INSTRUCTIONS

General safety instructions that must be observed to use the equipment safely are explained below.

- Do not place the printer in the following areas. Doing so may result in the printer tipping or falling over and causing injury.
 - Unstable surfaces
 - Sloping floors
 - Areas subject to vibration by other equipment
- Do not stand on or place heavy objects on your printer. Doing so may result in the printer tipping or falling over and causing injury.
- Do not cover the ventilation hole of your printer with cloth, such as a blanket or table cloth. Doing so
 could obstruct ventilation and cause fire.
- Do not place the printer in humid and dusty areas. Doing so may result in electrical shock or fire.
- Do not use a damaged power cable. Doing so may result in electrical shock.
- Do not attempt to plug in electrical plugs with wet hands. Doing so may result in electrical shock.
- Do not connect earth cables in the following areas.
 - O Gas pipes \rightarrow Doing so may cause fire or an explosion.

- Earth terminals for telephone line or lightening rod → Doing so may cause a large flow of voltage if lightening occurs.
- \circ Water pipes or faucets \rightarrow If there is a plastic part in the pipe, the earth will not work properly.
- Do not insert or drop metal or inflammable objects into openings, such as ventilation outlets. Doing so may result in electrical shock and fire.
- Stop using your printer if a liquid has been spilled into it. This may cause electrical shock or fire.
 Turn the printer off as soon as possible, unplug the power cord, and contact your local Xerox Customer Service Representative.
- Be sure to use the attached cable. Otherwise, electrical shock or fire may occur.
- Be sure to use the specified voltage (AC 100 V to 120V, or AC 220V to 240V). Otherwise, electrical shock or fire may occur.
- Use electricity directly from a power outlet (AC 100 V to 120V, or AC 220V to 240V). Do not put
 many loads on one electrical output. Otherwise, heat may be generated and cause fire.
- Be sure to use an outlet with an earth terminal and use the terminal correctly. Otherwise, electrical shock or fire may occur.
- Follow the instructions below when handling the power cable.
 - O Do not modify the cable.
 - O Do not put heavy objects on the cable.
 - O Do not bend, twist or pull the cable.
 - O Do not wire the cable near equipment that generates heat.
- Follow the instructions below when handling the power plug. Otherwise, fire may occur.
 - O Wipe away dust and any other residue before inserting the plug.
 - Ensure that the plug is firmly inserted as far as it can go.
- When handling the foot switch, be aware of the following:
 - O Do not place anything heavy on the foot switch.
 - O Do not bend the cable of the foot switch with force and do not pull.
 - O Do not place the foot switch near thermal devices.
- When handling ink cassettes, be careful that ink does not get in your eyes or on your skin. However, if this happens, flush immediately with water and wash skin with soap. Otherwise, your eyes may become congested or inflamed slightly. If you feel discomfort, consult a doctor immediately.
- Do not disassemble ink cassettes. Otherwise, ink may get in your eyes or on your skin.
- 8265/8290/8365/8390 Inks

General information:

Symptoms of poisoning may even occur after several hours; therefore medical observation for at least 48 hours after the accident.

- After inhalation:
 - Supply fresh air. If required, provide artificial respiration. Keep patient warm. Consult doctor if symptoms persist.
 - In case of unconsciousness, place patient stably in side position for transportation.
- After skin contact: the product does not irritate the skin.
- After eye contact: Rinse opened eye for several minutes under running water.
- After swallowing: medical advice or consult doctor.

- Be careful not to pinch your fingers when opening and closing the cover of the ink compartment.
- Be careful not to pinch your fingers when opening and closing the front cover.
- Follow the instructions below when connecting the network interface cable. Otherwise, electrical shock or fire may occur.
 - Do not touch the connector.
 - Do not connect the network cable connector which has not the same specifications as the interface board.
- When cutting the roll media, be careful of the following. Incorrect handling can result in injury to the hands and fingers from the razor blade.
 - O When holding the media, do not place fingers over the media cut groove.
 - Move the razor blade slowly along the media cutting groove.
- Do not use thinner, benzene, alcohol or other active agents. Doing so may result in damage or paint peeling from the casing.
- Be careful not to spill water inside the printer. Doing so may result in a short circuit.
- Be careful not to touch the heaters during or after operation. Doing so may result in burns.
- Only use Xeror Ink and appropriate cleaning liquid.
- Never open the covers fixed with screws, except the left cover. Doing so may result in electrical shock or a malfunctioning of the printer.
- Do not touch the cutter blade. Doing so may result in bodily injury.
- Do not cut hard objects or drop the cutter. Doing so may damage or chip the cutter blade.
- Do not bend or pull the waste fluid tube. Doing so may cause that the waste fluid will leak out and malfunction of the product.
- Do not touch the cleaning wiper or the head cap unit with bare hands. Use a dust free cloth and gloves to clean.
- Do not tilt the printer, stand it against a wall or turn it upside down. Doing so may cause ink to leak inside the printer. Movement after transport is also not covered by the warranty.
- The equipment that you bought requires the extraction and use of natural resources for its production. It may content hazardous substances for the health and the environment. In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back system. Those systems will re-use or recycle most of the materials of your end life equipment in a sound way. If you need more information on the collection, re-use and recycling systems, please contact your local or regional waste administration.

1.4 WARNING LABELS

The handling, attachment locations, and types of warning labels are explained below. Warning labels are attached on areas which require attention. Read and understand the positions and contents thoroughly before performing your work.

1.4.1 Handling the Warning Labels

Be sure to note the following when handling the labels.

⚠ Notes ⚠


- Make sure that all labels can be recognized. If text or illustrations cannot be seen clearly, either clean or replace the label.
- When cleaning labels, use a cloth with water or neutral detergent. Do not use a solvent or gasoline.
- If a warning label is damaged, lost or cannot be recognized, replace the label. When replacing warning labels, contact your local Xerox Customer Service Representative.

1.4.2 Locations and Types of Warning Labels

The locations of warning labels are shown below.

1.4.2.1 <u>Location and Types of Warning Labels on the Front of the Printer</u>



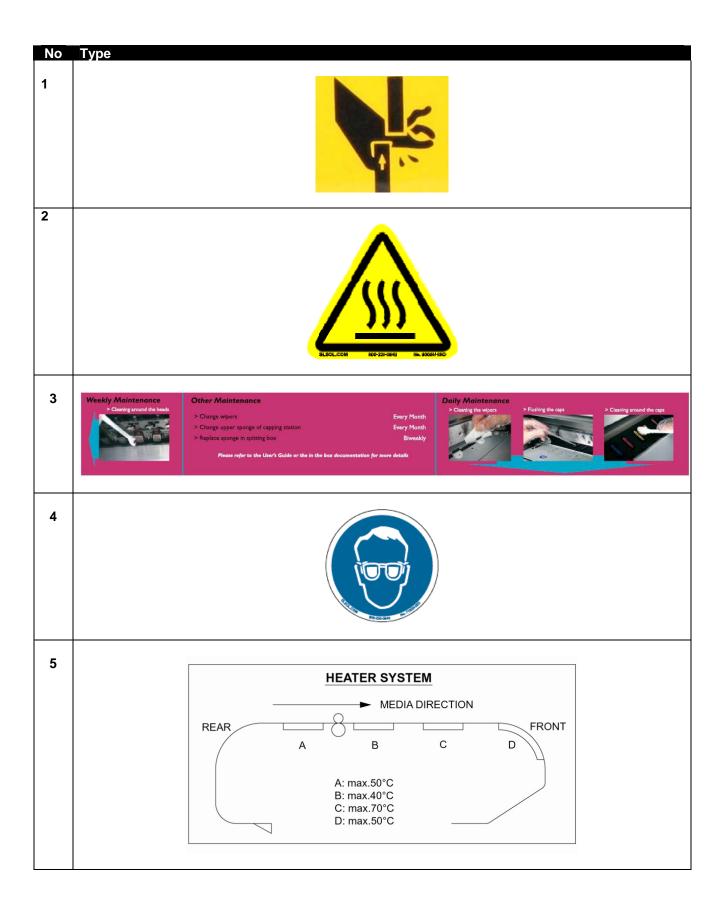

6



7

CAUTION VORSICHT ATTENTION

- Do not open the front cover or touch the media during printing. This will result in poor image quality.
 If no printing is to be done for some time, remove the media and put the pressure rollers in the up position. Otherwise the media may lift up and become wrinkled and you will not be able to obtain good printing results.
- > Öffnen Sie während des Druckens die Frontabdeckung nicht und berühren Sie das Druckmaterial nicht.
- > Wenn Sie w\u00e4hrend l\u00e4ngere Zeit den Drucker nicht benutzen, nehmen Sie das Druckmaterial heraus und stellen Sie die Drucksrollen in die obersten Position. Sonst kann sich das Druckmaterial aufheben und zerknittern und demzufolge erzielen Sie keine gute Druckergebnisse mehr.
- > N'ouvrez pas le couvercle quand l'imprimante est en train d'imprimer. Ne touchez pas non plus le papier afin d'éviter que la qualité s'aggrave.
- > Si vous ne comptez pas imprimer pendant un certain temps, retirez le papier et mettez les rouleaux de pression en position levée. Sinon, le support risque de se soulever et de se froisser et vous n'obtiendrez pas de bonne qualité d'impression.

8


Number		Slot number of ink cassette							
of colours		1	2	3	4	5	6	7	8
4	2x4 colours	Black	Yellow	Cyan	Magenta	Magenta	Cyan	Yellow	Black
6	1x6 colours	Black	Cyan	Transition Liquid	Transition Liquid	Yellow	Magenta	Light Cyan	Light Magenta

9





1.4.2.2 <u>Location and Types of Warning Labels on the Rear of the Printer</u>

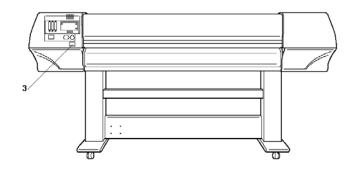

No	Туре	
3		CAUTION
		THIS UNIT HAS TWO POWER SUPPLY CORDS, WHEN WINDING UNIT IS PROVIDED. TO REDUCE THE RISK OF ELECTRICAL SHOCK, DISCONNECT ALL POWER SUPPLY CORDS BEFORE SERVICING.
4		



2 PRINTER OVERVIEW

2.1 FEATURES

The features of the printer are explained below.

(1) High speed output

Achieve high speed printing, maximum media width of 2280 mm and printing width up to 2250 mm.

(2) Wide variety of compatible media

Adjustable head height can be adapted to various media thickness from 0.08 up to 1.1 mm.

(3) Vibrant Colour Reproduction

To reproduce sharp and vivid colour, either 4 or 6 ink colours are used for printing. Ink cassette come in either 220ml or 440ml capacity with an IC chip that tracks the ink quantity in the cassette, significantly improving productivity.

(4) Effective usage of media

A media feed feature is provided allowing the user to feed media forward or backward to set the printing position. Because printing can be performed on media on which there has already been printed, excess space can be used effectively.

2.2 PART NAMES AND FUNCTIONS


Part names and functions are explained below.

2.2.1 Front of Printer




No	Name	Function			
1	Heater plate	Supports and heats the media during printing.			
2	Front cover	Keeps the operator safe from the drive parts of the printer while it is operating. Only open and/or close the cover to perform following operations: Media setting and replacement Cutter blade replacement Cleaning the cleaning wiper			
3	Carriage	Drives and holds the print heads.			
4	Operation panel	To control the printer.			
5	Ink compartment cover	Covers the ink compartment.			
6	Stand	Carries the main body.			
7	Waste bottle assembly	Collects the waste fluid.			
8	Winder	Rolls up the roll media.			
9	Front tension system	Keeps the media under tension.			
10	Left maintenance covers.	Covers the maintenance areas.			

2.2.2 Rear of Printer

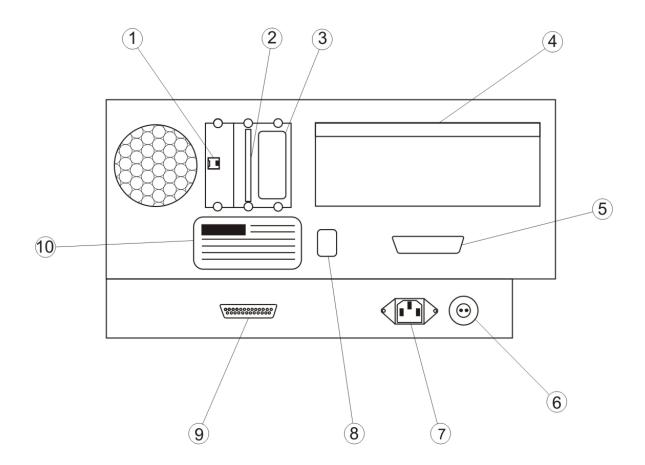

No	Connection
1	Ethernet connector
2	Card reader slot
3	SmartChip label
4	Bracket Cover
5	Centronics connector
6	Foot switch connector
7	Power inlet
8	Environmental label
9	DB-25 connector
10	ID label

2.2.3 Position and Function of the Heating Elements

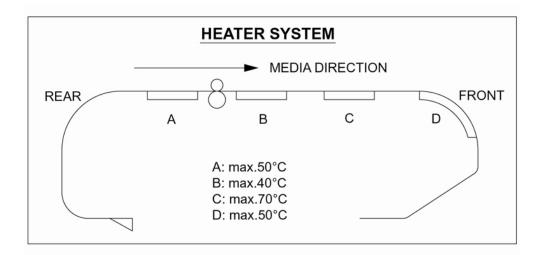

Heater element	Temperature	Function
Pre-heater (Heater A)	20 – 50°C	 Open the pores to make the media more receptive for 8365/8390 Mild Solvent Ink.
Fixer (Heater B)	20 – 40°C	 To establish optimum fixation onto the media (coated and uncoated). Optimizes the dot gain control.
Post-Fixer (Heater C)	20 – 70°C	 The post-fixer finalizes the fixation process and helps to make the prints touch-dry.
Dryer (Heater D)	20 – 50°C	 The dryer completes the drying for compatibility with the take-up in combination with higher output speeds. Stickiness of printed banner materials is improved.


• For user 1 and user 8 default settings are as follows:

Pre heater A: 50°C
 Fixer B: 40°C
 Post Fixer C: 50°C
 Dryer D: 50°C

For users 2 → 7, by default the heaters are still OFF.

2.2.4 Printer Control Panel

The operation panel is used to set operational conditions, display the status of the printer, and set other functions. The names and functions of the operation keys and status lamps are explained below.

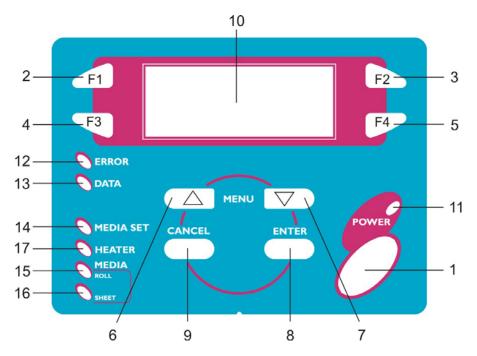


2.2.4.1 Operation keys

N			
No	Name	Normal	Setup menu display
1	[POWER] key	Turns the printer on and off.	Turns the printer on and off.
2	[F1] key	Executes the function assigned to F1.	Executes the function assigned to F1.
3	[F2] key	Executes the function assigned to F2.	Executes the function assigned to F2.
4	[F3] key	Executes the function assigned to F3.	Executes the function assigned to F3.
5	[F4] key	Executes the function assigned to F4.	Executes the function assigned to F4.
6	[MENU ↑] key	Changes the LCD monitor display to the setup menu status.	Changes the menu in reverse order.
7	[MENU ↓] key	Changes the LCD monitor display to setup menu status.	Changes the menu in forward order.
8	[ENTER] key	Displays the print mode currently set.	Determines the new parameter value and changes the LCD monitor display to the next menu. Sets the parameter value and changes the LCD monitor display to the next menu.
9	[CANCEL] key	-	Cancels the new parameter value and changes the LCD monitor display to the next menu. Clears the parameter value and changes the LCD monitor display to the next menu.

2.2.4.2 <u>LCD Monitor</u> and Light Indicators


No	Name	Colour	Status	Function
10	LCD monitor	-	-	The monitor displays the operation status and error messages of the printer.
11	POWER lamp	Green	ON OFF	The printer is on. The printer is off.
12	ERROR lamp	Red	Flashing	An error has occurred. The contents will be displayed on the LCD monitor. Either there is no error or the power is off.
13	DATA lamp	Orange	ON Flashing OFF	The printer is receiving print data. The printer is analyzing received data. The printer is waiting to receive print data.
14	MEDIA SET lamp	Orange	ON OFF	The pressure roller is in the release position. Media has not been loaded. The pressure roller is in the secured position. The media has not been loaded.
15	ROLL lamp	Orange	ON OFF	The media type is set to roll media. The media type is set to sheet media.
16	SHEET lamp	Orange	ON OFF	The media type is set to sheet media. The media type is set to roll media.
17	HEATER lamp	Orange	ON Flashing	The temperature of the heating elements is the requested temperature. The real temperature is the same as the requested temperature. The heating elements are warming up. The real temperature is different as the requested temperature.
			OFF	The heating elements are powered OFF.

2.2.5 Winder (Front)

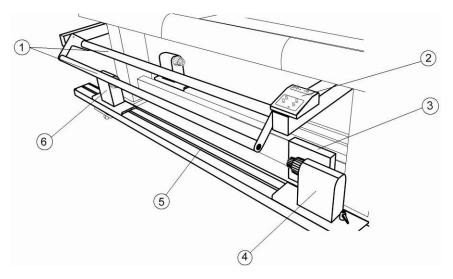


No	Name	Function
1	Front tensioning system	Adjust the tension between the print platform and the winding system.
2	Operation panel	To control the unwinder winder 100 manually or automatically
3	PCB Box	Contains the boards to control the UW/W 100.
4	Motorized roll unit	Supports and winds up the roll media.
5	Roll unit bar	Supports the roll units.
6	Roll unit	Supports the roll media.

2.2.6 <u>Unwinder (Rear)</u>

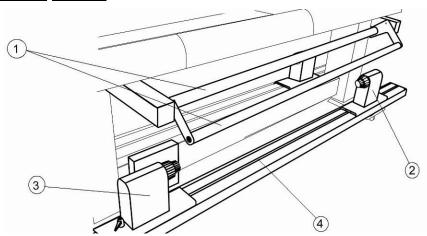

No	Name	Function
1	Rear tensioning system	Adjust the tension between the print platform and the unwinding system.
2	Roll unit	Supports the roll media.
3	Motorized roll unit	Supports and unwinds the roll media.
4	Roll unit bar	Supports the roll units.

2.2.7 Winder/Un-winder Control Panel

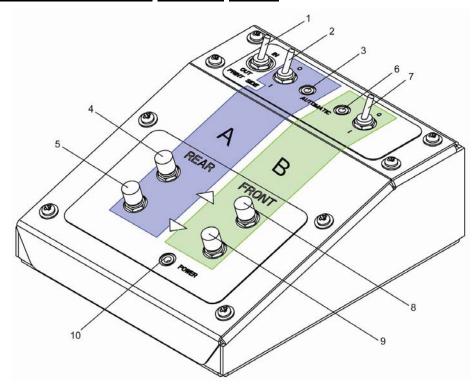

No.	Name		Fun	ction
Α	/		Part of the operation panel controlling the unwinder 100.	
В	1		Part of the operation panel controlling the winder 100.	
1	Print Side Selector		In case you loaded media with printed side on the outside select 'OUT', otherwise select 'IN'.	
2	Unwinder 100 switch		Toggle between Manual ("0") and Automatic ("1") mode.	
		Manual	LED lights up when pushing one of the buttons	
3	Unwinder 100 LED	Automatic	Motor turns: LED flashes.	
"			Motor is off: LED is out.	
			Motor accelerates: LED burns continuously.	
			Outside printing	Inside printing
4	Backwards button		Roll-off unwinder	Roll-up unwinder
5	Forwards button		Roll-up unwinder	Roll-off unwinder
6	Winder 100 switch		Toggle between Manual ("0") and Automatic ("I") mode.	
	Winder 100 LED	Manual	LED lights up when pushing one of the buttons	
7		Automatic	Motor turns: LED flashes	
			Motor is off: LED is out.	
			Outside printing	Inside printing
8	Backwards button		Roll-off winder	Roll-off winder
9	Forwards button		Roll-up winder	Roll-up winder
10	Power LED		Lightens up if the system is powered ON.	


2.2.8 Winder/Un-winder Operation Labels


The operation labels mentioned below are attached to areas to which attention should be paid.

⚠ Notes ⚠


- Make sure that all labels can be recognized. If text or illustrations are invisible, clean the label.
- When cleaning labels, use a cloth with water or neutral detergent. Do not use a solvent or gasoline.
- If an operation label has been damaged, lost or cannot be recognized, replace the label.

Foot switch label







Front tensioning label

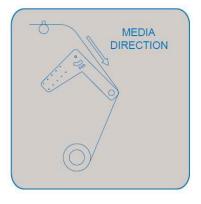

Roll unit handle label

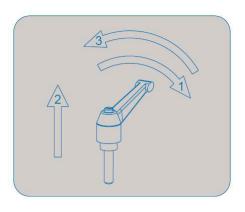


Rear tensioning label

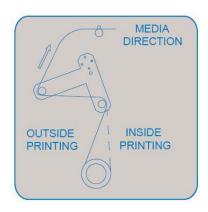

PCB box label

OPERATION PANEL FOOT SWITCH REAR FRONT



This page has been intentionally left blank.

3 PRINTER SETUP

3.1 TURNING THE PRINTER POWER ON/OFF

The method to turn the power ON or OFF is described below.

△ Caution △


Before powering ON the unit, make sure the waste bottle is installed.

3.1.1 Turning the Power ON

Turn the power of the unit ON according to following procedure.

Step 1 : Press the [POWER] key of the operation panel, to turn the unit ON.

> The POWER lamp of the operation panel will light (green).

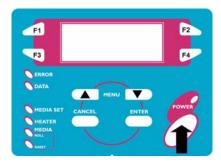

Step 2: The unit will start initial start-up operations.

Step 3: After finishing initial start-up operations, the unit will enter the normal operating condition.

⚠ Notes ⚠

If there are any problems during the initial start-up operation, the unit will display a message on the operation panel, and the operation may stop. If the operation stops, refer to "Troubleshooting", and take the appropriate actions.

3.1.2 Turning the Power OFF


Turn the power of the unit OFF according to the following procedure.

- **Step 1:** Verify the following regarding the operational condition of the unit.
 - There is no printing operation being performed.
 - > The operation panel is in a normal status.
- **Step 2:** Press the [POWER] key of the operation panel to turn the unit OFF.

⚠ Notes ⚠

When the printer is ON, the power LED is lid green. Push the power button again to turn off the machine.



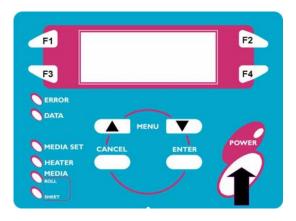

Step 3: Following message is displayed for 3 seconds on the operation panel.

⚠ Notes ⚠

If pressing the [POWER] key on the operation panel by mistake, press the [POWER] key again while the following message is displayed.



Step 4: The product will perform the power OFF operation.

Following message is displayed on the operation panel.



- > All lamps and the LCD of the operation panel will turn OFF.
- > The product will automatically turn the power OFF after performing a tubing flush.

⚠ Notes ⚠

If there are problems during the power OFF operation, the unit will display a message on the operation panel, and the operation may stop. If the operation stops, refer to "Troubleshooting" and take the appropriate actions.


3.2 TURNING THE WINDER/UN-WINDER POWER ON / OFF

The switch in located on the power supply box.

Its status is marked with "O" and "I".

"I" Switched ON Power LED on control panel of winding system will light up

"O" Switched OFF Power LED on control panel of winding system will not be lid.

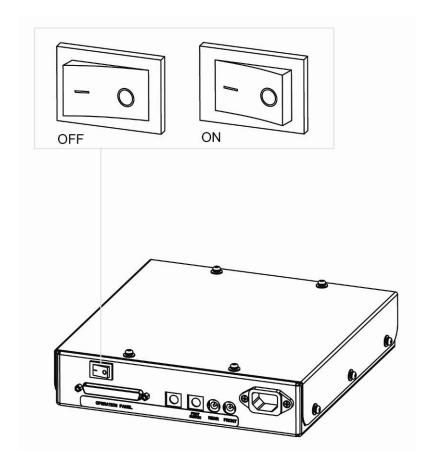


3.3 CONNECTING THE NETWORK INTERFACE

The procedure for connecting the network interface is explained below. To connect the printer to the network environment, follow the steps below.

△ Caution **△**

- Follow the instructions below when connecting the network interface cable. Otherwise, electrical shock or fire may occur.
 - Do not touch the connector.
 - Do not connect the network cable connector to the interface board having different specifications.
- Step 1: Turn off the printer.
- **Step 2 :** Plug the connector of the Ethernet cable into the connector of the network interface board at the back of the printer.

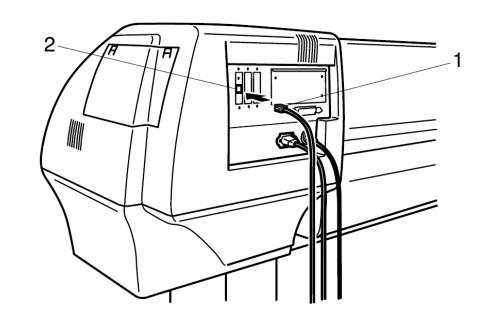

- 1 Network interface connector
- 2 Interface cable

Step 3: Connect the other end of the Ethernet cable to the network.

⚠ Notes ⚠

Refer to "Network interface board operation manual" to use the network interface board.

3.4 MEDIA HANDLING

Media handling, attaching media, and setting media type are explained below.

3.4.1 Loading Sheet Media

You can use the following sheet media with your printer.

Maximum Media Width 2280 mm

Printing Width Up To 2250 mm

To load sheet media, follow the steps below.

If roll media is attached to the printer, wind the media up and then load the sheet media.


- **Step 1:** Turn the printer on.
- **Step 2:** The printer starts the initialize operation.
 - > The following message is displayed on the operation panel.



⚠ Notes ⚠

If you do not want to use the media detection at the media initialization: Set to "OFF" in the media detection setup item.

- **Step 3:** Verify if the sheet lamp on the operation panel is unlit.
- **Step 4:** Press the [F4] key on the operation panel to lower the pressure rollers.
 - The MEDIA SET lamp will light (orange).
 - > The following message is displayed on the operation panel.



⚠ Notes ⚠


When raising or lowering the pressurize rollers, you can use the foot switch instead of the operation panel.

Step 5: Open the front cover.

△ Caution **△**

Be careful not to pinch your fingers when opening and closing the front cover.

Step 6: Load the sheet media into the insertion slot at the front of the printer.

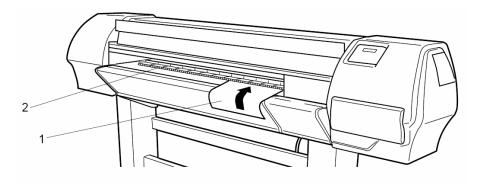


- 1 Sheet media
- 2 Insertion slot

Step 7: Set the right edge of the media so that it is parallel with the media setting position.

⚠ Notes ⚠

- The media set position is a guideline for setting up the media.
- If the right edge of the sheet media is 5 mm or more from the media setting position, a media set error may occur if the media is not detected. Make sure to set the right edge of the sheet media within 5 mm of the media setting position.

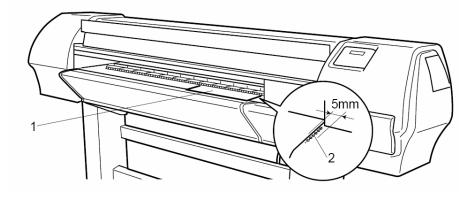

- 1 Sheet media
- 2 Media loading position

Step 8: Press the [F4] key on the operation panel to lower the pressure rollers.


- > The MEDIA SET lamp will turn off.
- **Step 9:** Close the front cover.
- **Step 10:** The media initial menu is displayed on the operation panel.




3.4.2 Loading Roll Media

3.4.2.1 <u>Installing the media roll</u>

Step 1 : Determine the printable side of the media roll (inside or outside printing) and lay down the media roll as shown in the images below.

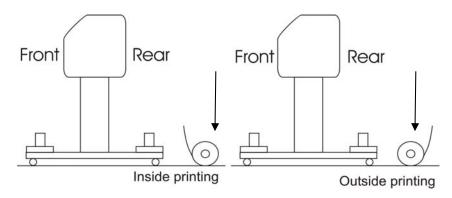


Step 2 : Position the roll units of the unwinder in such a way that the media roll can be placed in between.

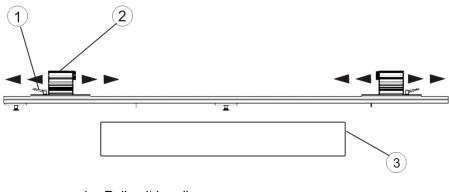

- 1 = Roll unit handle
- 2 = Roll unit
- 3 = Media roll
- Step 3: Lock one roll unit to the roll unit bar
- **Step 4:** Place one side of the roll over the flange of the locked unit.

- **Step 5:** Slide the flange of the other roll unit into the roll and lock the unit by using its handle.
- **Step 6 :** You can now de-lock both sides to position the roll.
- **Step 7:** Set the right edge of the media on the Unwinder so that it is parallel with the media setting position.

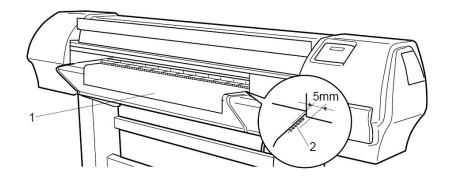

- 1 Roll media
 - 2 Media setting position

⚠ Notes ⚠


We recommend wearing cotton gloves to avoid fingerprints on the inkjet media.


- **Step 8:** Lock both sides of the Unwinder.
- 3.4.2.2 Loading the media into the printer
- PART 1: INSTALLING AN EMPTY CORE AND LOADING THE MEDIA THROUGH THE REAR TENSIONING SYSTEM
- **Step 1:** Make sure the printer and UW/W 100 are ON.
- **Step 2:** Press the [F4] key to raise the pressure rollers.
- **Step 3:** Open the front cover.
- **Step 4:** Install an empty core between the motorized roll unit and roll unit of the winder unit on front of the printer.

⚠ Notes ⚠

Make sure the core is longer than the media width.

- **Step 5:** Make sure both unwinder (REAR) and winder (FRONT) unit are set to MANUAL mode.
- **Step 6:** Use the foot-switch to release some media on the rear.
- **Step 7:** Load media through the rear tensioning system as shown below.

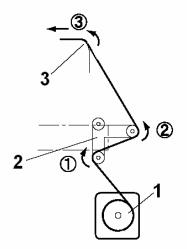

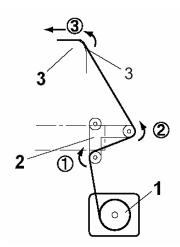

Printable side on the outside of the roll

Printable side on the inside of the roll

1 = Unwinder

2 = Rear tensioning system

3 = Media insertion slot of the printer

PART 2: LOADING THE MEDIA TROUGH THE FRONT TENSIONING SYSTEM

Step 1: Load the media through the printer's pressure rollers.

Step 2 : Standing in front of the printer, take the media and pull it until there is equal tension on the left and right of the media.

Step 3: Do not pull the media in the middle.

Step 4: Lower the pressure rollers of the printer.

Step 5: Set the unwinder (REAR) unit to AUTOMATIC.

Step 6: The rear tensioning system will go to its initial position.

Step 7: Close the front cover.

Step 8 : Start printing until the media reaches the front core of the winder OR feed the media without printing.


Step 9 : Use tape to fix the media end to the empty core installed at the winder unit. Start taping the middle of the media, then the both ends, applying equal tension on both ends.

Step 10: Set the winder (FRONT) unit to ACTIVE. The front tensioning system will be activated.

Step 11 : Setup the printer to use the Winder. At the Printer Control Panel, go to the PaperDet. Menu and press F3 TakeUpRoll.

⚠ Notes ⚠

With a small intervention it is possible to reverse your winding direction. Mount the twist cable between the control box and the front motorized unit cable.

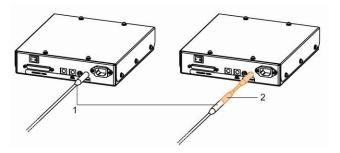

⚠ Notes ⚠

You can use the roll-off foot switch during loading of roll media.

3.4.3 Setting Media Type

The procedure for setting media type is explained below.

- **Step 1:** Turn the printer on and load the media.
 - > Once the media has been set, the media initial menu will be displayed.
- **Step 2:** Press one of the following keys on the operation panel, and select the current media type.
 - When alternating roll/sheet media selection: [F2]
 - When changing from media loading: [F3]
 - When changing media type: [F4]



Setup items Media type	Key F2	Parameters Roll media Sheet media	Description Alternates the roll media type. Roll media: Set when loading roll media. Sheet media: Set when loading sheet media.
Lever Down/Up	F3	Lever up Lever down	Switches between up and down motion of the pressurizing lever. Use this when starting over from the media setup.
Media Type	F4	User 1 User 2 User 3 User 4 User 5 User 6 User 7 User 8	Set media type for printing. For setup values of printing operation, eight settings of "user 1-8" can be set. Refer to 'Menu Overview'

- **Step 3:** Press the [Enter] key on the operation panel.
 - > The media type has been set.
 - > "Media Initial" is displayed on the LCD, and the printer starts the media initial operation.

⚠ Notes ⚠

- The printer starts the media initial operation if you :
 - o Press the [CANCEL] key on the operation panel
 - Leave the printer for 10 seconds without doing anything



Step 4 : When the media initial operation finishes, the printer moves to normal status.

The setting media loading procedure has been completed.




3.5 TEST PRINTING

Follow the steps below to do a test print and confirm if your printer operates correctly.

- **Step 1 :** Turn the power of the unit ON and load the media.
- **Step 2:** Make sure that your printer is in normal status.
- **Step 3 :** Press either the [MENU \uparrow] key or [MENU \downarrow] key on the operation panel.
 - > The setup menu is displayed.



- **Step 4:** Press the [F3] key on the operation panel.
 - "TestPrint: SetupPrint" is displayed on the LCD.





Step 5: Select an item and press the appropriate key.

Setup items	Key name	Parameters	Descriptions
Test Print (1/2)	F1	Setup	Perform Setup List.
			Refer to 'Setup List'
	F2	Nozzle Check	Perform Nozzle check.
			Refer to 'Nozzle Check'
	F3	Adj. Uni-D	Perform the Uni-Directional Alighment.
			Refer to Adjustments
	F4	Adj. Bi-D	Perform the Bi-Directional Alignment.
			Refer to Adjustments
Test Print (2/2)	F1	Palette	Perform Colour Palette.
			Refer to 'Colour Palette'
	F2	Maintenance	Perform Maintenance record.
			Refer to 'Maintenance record'


Step 6 : Print the information on the selected item.

Step 7: After printing, the printer returns to the normal status.



3.5.1 Setup List


Use this function to check the current status of the printer.

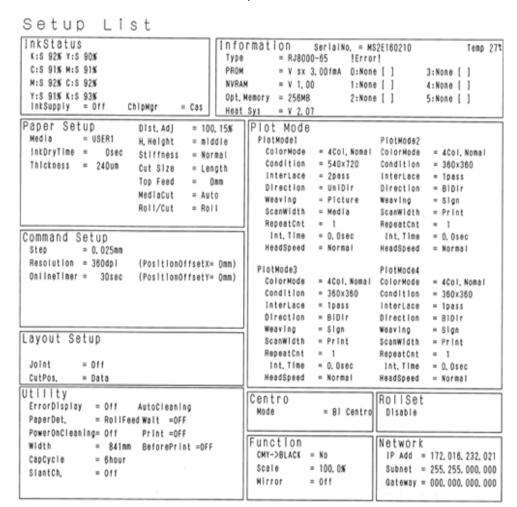

3.5.2 Nozzle Check

Use this function to check if there is any clogging of nozzles, missing dots or faint printing.

If printing quality declines, or if missing dots are evident after the NozzleCheck, the print heads need to be cleaned. Refer to "Head cleaning" to perform head cleaning. After finishing the head cleaning, wait for 10 minutes and perform the NozzleCheck again.

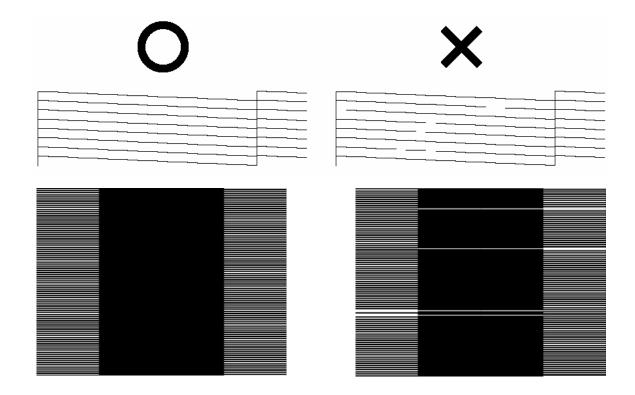

3.5.3 Colour Palette

Use this function to compare the colour settings of the computer print colour of the printer. This palette is printed in the mode you are currently working (PrintMode settings). We recommend printing the palette in 360x360.



3.5.4 Maintenance Record

Use this function to check the life cycles of the printer parts.

⚠ Notes ⚠

A part's life cycle is shown by the amount of the * mark. When a part's life cycle comes to an end, the * mark reduces.

====== Maintenance Record ======= Version : sx 3.00fmA Ink Cart. 1 : E****F Ink Cart. 2 : E****F Ink Cart. 3 : E****F Ink Cart. 4 : E****F Ink Cart.5 : E****F Ink Cart.6 : E****F Ink Cart.7 : E****F Ink Cart.8 : E****F Cutter Life : E****F Page Count : 1238 Waste Ink : E*** F CR Motor Life : E****F PF Motor Life : E****F Head Life : E****F Cleaner Life : E*** F Pump Life : E****F Head Unlock : 67 Media Feed : 2199 ChipMgr Printer : 0 ChipMgr Printer Log: 0 ChipMgr Printer Log: 2000 ChipMgr Printer Log★: 108 ChipMgr Printer Log: 0 ChipMar Printer Loa: 0 ChipMgr Printer Log: 0

4 PRINTER OPERATION

4.1 PRINTER STATUS

The status of the printer is explained below.

4.1.1 Normal

Indicates that the printer can receive print data when media is loaded. You can also change printer settings using the operation panel. The content displayed on the LCD monitor of the operation panel is as follows:



No	Position	Description
1	1st line	Displays the current status of the printer. Depending on the status, the contents may be displayed in 2 to 4 lines.
2	Left of 2nd line	Displays the function assigned to [F1] key.
3	Right of 2nd line	Displays the function assigned to [F2] key.
4	Left of 3rd line	Displays the function assigned to [F3] key.
5	Right of 3rd line	Displays the function assigned to [F4] key.
6	Left of 4th line	Displays the currently set media type.
7	Right of 4th line	Displays the approximate amount of remaining media that is currently set. (Units: m)
		However, the amount is displayed only when either "Roll media 1", "Roll media 2", or
		"Roll media 3" is selected in the Roll media setting menu.

4.1.2 Setting Menu Display

In the SetupMenu, changes can be made to the printer settings. The content displayed on the LCD monitor of the operation panel is as follows:



No.	Position	Description
1	1st line	Displays the setting menu name currently set.
2	Left of 2nd line	Displays the function assigned to [F1] key.
3	Right of 2nd line	Displays the function assigned to [F2] key.
4	Left of 3rd line	Displays the function assigned to [F3] key.
5	Right of 3rd line	Displays the function assigned to [F4] key.
6	4th line	Displays the currently available functions of the [F1] key to the [F4] key.
		Displays the page status if there are multiple pages for the currently displayed
		setting menu.

4.1.3 Changing the Printer Status

To change the printer status, follow the steps below.

4.1.3.1 Changing the status from normal to the setting menu display

Press either on the operation panel when the printer is in normal status.


The display of the operation panel changes to the Setting menu display.

Refer to "Setup menu" for details of the setting menu.

4.1.3.2 Changing the status from the setting menu display to normal

Take one of the following actions when the printer is in the setting menu display to change the operation panel display to normal one.

- Press the [CANCEL] key on the operation panel.
- Leave the printer for 3 minutes when the status is in the setting menu display.

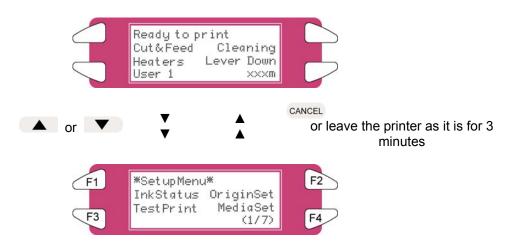

⚠ Notes ⚠

Refer to 'Status messages" for details of displaying the printer status.

4.2 USING MEDIA

This section describes details on available media for the printer.

4.2.1 Media Type

The type and quality of the media affect the results of drawing enormously. Refer to the description below and use the appropriate media for your purpose. The following are the recommended media for the printer. Select the appropriate media for your purpose.

⚠ Notes ⚠

- For more information about the recommended media, contact your local Xerox Dealer.
- Problems that occur due to use of media other than those recommended are not guaranteed.

⚠ Notes ⚠

- When using recommended media, the setting values for the printing quality is set for each media type.
- When printing on media other than those specified, information regarding proper settings for the media
 type and settings for the product should be found on the instructions for the media. If not contact the
 supplier of the media.

4.2.2 Cautions on Handling Media

When you handle media, please pay attention to the following.

⚠ Notes ⚠

• Use recommended media in an appropriate environment. Following are the appropriate temperature and humidity ranges for printing.

	Temperature	Humidity
Recommended working environment	74°F(23°C)	40% to 70%
Rate of change	Within 36°F (2°C) per hour	Within 5% per hour

- Do not use creased, damaged, torn, curled, or wrapped media.
- The size of the recommended sheets can change at a fixed ratio according to the temperature changes of the working environment. Before using sheet media, place the sheet in the working environment for at least 30 minutes, to have it match to the temperature of the working area.
- Printing before the media could accommodate to the printing environment may cause media jams due to slippage or creases. This also adversely affects the quality of printing.
- Media has a printable side and a non-printable side. If you print on a not printable side, blurring or slight touching may occur.
- Do not touch the printable side of media. Moisture or oil from hands affects the printing quality.
- Do not leave the printer for a long time with media loaded. The media may curl resulting in misalignment, media jams, or decreased printing quality. In particular, avoid this in winter, dry seasons, or during final printing.
- Do not lose the box or wrapping bag for storing media.

4.2.3 Precaution on Storing Media

When storing media, pay attention to the following.


⚠ Notes ⚠

- Do not store media in high temperature, high humidity, or direct sunlight.
- · Store sheet media in the original bag after unpacking.
- Unused roll media must be removed from the scroller, rewound tightly, and stored in the original wrapping bag and the box.
- Do not wet media.


4.2.4 Media Printing Area

The printing area is shown below.

(1) Roll media

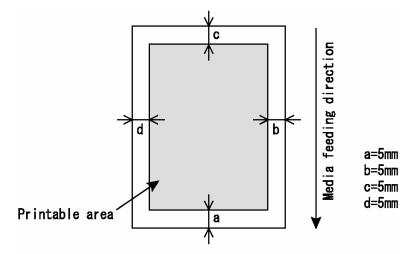

(2) Sheet media

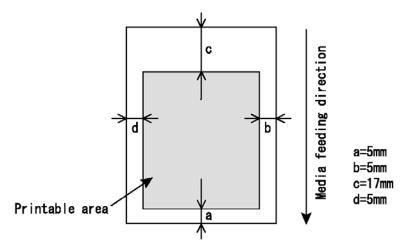

4.3 MENU OVERVIEW


This section describes how to set the Menu settings on the operation panel, and setup items.

Follow the steps below to set the Menu settings.

Step 1 : Make sure that the operation panel is normal.



Step 2: Press the [MENU ▲] or [MENU ▼] key.I) The screen shows following Menu.

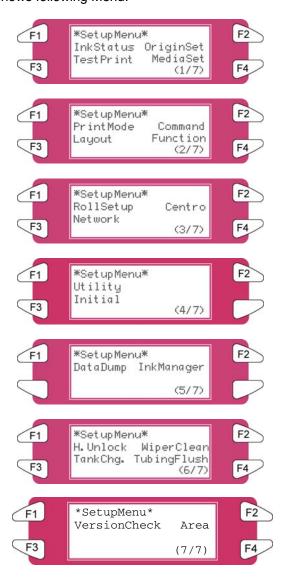

⚠ Notes ⚠

The Network Settings menu is displayed if the network interface board has been installed on the product. The items on the File Management menu are displayed if a hard disk has been installed in the product.

Setup items	Parameters	Description
	InkStatus	Displays the information (ink status) for each ink cassette installed in the ink cassette slot.
SetupMenu (1/7)	OriginSet	Sets the printing start position (origin) for printing data.
	TestPrint	Performs test printing.
	MediaSet	Makes various media settings.
	Print mode setting	Makes various print mode settings.
SetupMenu (2/7)	Command setting	Makes various printer command settings.
Setupivienu (2/7)	Layout setting	Makes various layout function settings.
	Function setting	Makes various processing printing data settings.
	Roll setting	Makes various roll media settings.
SetupMenu (3/7)	Centronics setting	Sets Centronics Interface communication mode.
	Network setting	Makes the settings for the network interface.
	Utility setting	Makes various advanced function settings.
SetupMenu (4/7)	File management setting	Makes various settings for the processing method of the printing data sent from computer to the installed hard disk in the printer.
	Initialize setting	Returns the parameters to factory default value.
	Data dump	For Authorized Xerox Service Technicians only
SetupMenu (5/7)	Ink Manager	Manages the ink configuration, smart chip management system and other ink related settings.
	Head Unlock	The cutting blade is replaced.
SetupMenu (6/7)	Wiper clean	Clean the wiper.
Setupivienu (0/7)	Tank change	Tank is replaced.
	Tubing Flush	Makes various tubing flush settings
SetupMenu (7/7)	Version Check	Ability to view the installed firmware version.
SetupMenu (1/7-7/7) -		[CANCEL] key: Cancel the setup menu, and shift to the normal condition.

⚠ Notes ⚠

By using the software server RIP (option), some setups for printing can be set by the RIP. For details, refer to the operation manual of the products.


4.3.1 Setup Menu 1/7



4.3.1.1 InkStatus Menu

Depending on the mode the printer is in (cassette or printer mode), this menu will be displayed as InkStatus. The InkStatus menu gives all information regarding the 8 ink cassettes in the slots.





8265/8290

8365/8390

Setup items	Parameters	Description	
InkStatus	Ink status for the ink cassette slots 1 – 8.	> L > L	ine 2: ink cassette slots 1 – 3 ine 3: ink cassette slots 4 – 6 ine 4: ink cassette slots 7 – 8
		• Symbols : (Parameter 1 : Parameter 2 Parameter 3)
		Param. 1	Ink Colour: Values: K: Black, C: Cyan, M: Magenta, Y: Yellow, c: Light Cyan, m: Light Magenta, W = Cleaning Liquid
		Param. 2	Ink Remaining : Values : ■ = 25%
		Mode : Indicated on the lower right corner	
			<u>Values</u> :
			UltraE = Eco-Solvent / 8265/8290
			MS = Mild Solvent / 8365/8390
	-		y: shifts to the previous menu.
		Refer to Setu	p menu

⚠ Notes ⚠

To display the Ink Status menu, be sure to use the recommended ink cassettes. If any other ink cassette is used, the ink status will not be correctly displayed.

4.3.1.2 OriginSet Menu

Set the printing start position (origin) for printing data. Set this when you want to re-print to blank area of the printed media by changing the layout of the printing data.




Setup items	Parameters	Description
OriginSet	L: Media feed value W: Print head movement value (Unit: mm)	Changes the print head position and media feed amount by operating the following keys. • [F1] key: Feeds media forward. • [F2] key: Moves the print head to the left. • [F3] key: Feeds media backward. • [F4] key: Moves the print head to the right. • [ENTER] key: Determines the setup values then returns to the previous hierarchical menu.
	-	[CANCEL] key: shifts to the previous hierarchy menu Refer to 'Setup menu'

⚠ Notes ⚠

When printing data from the hard disk, the printing will start from the same start position as when the printing data was written, regardless of the home position setting value.

4.3.1.3 TestPrint menu



Setup items	Parameters	Description
TestPrint (1/2)	Setup	Performs setup printing.
	NozzleCheck	Performs nozzle check printing.
	Adj. Uni-D	Performs accuracy adjustment printing in one direction.
	Adj. Bi-D	Performs accuracy adjustment printing in two directions.
TestPrint (2/2)	Palette	Performs palette printing.
	Maintenance	Maintenance status printing is performed.
	Dist.Check	Adjusts the Step or Feed distance of the inkjet printer (refer to
		Adjustment 8.1).
TestPrint (1/2-2/2)		[CANCEL] key: shift to the previous hierarchy menu.


4.3.1.4 MediaSet Menu



Setup items	Parameters	Description
MediaSet	Media	Sets the media type used for test printing.
	SheetSize	To set the method for detecting the size of the media when sheet
		media has been loaded.
	Topfeed	Sets the amount of media to be fed when printing begins. Make this
		setting when using roll media.
	Mediacut	The method of cutting the media after printing is set here.
		[CANCEL] key: to shift to the previous hierarchy menu.

4.3.1.5 <u>Media Menu</u>

Set media type for printing.

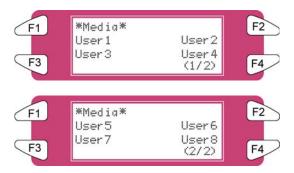

Setup items	Parameters	Description
Media (1/2)	User media 1	To set the type of media used for printing. For setup values of
	User media 2	printing operation, eight settings of "user media 1-8" can be set.
	User media 3	
	User media 4	
Media (2/2)	User media 5	
	User media 6	
	User media 7	
	User media 8	
Media (1/2-2/2)	-	[CANCEL] key: to shift to the previous hierarchy menu.

4.3.1.6 User Menu


Make various settings on user defined media. In the User media menu, for each setup value of following printing operation, eight settings of "user media 1-8" can be set.

⚠ Notes ⚠

When media other than the recommended media are used (user media), the following problems may occur:

- Media detection error
- Oblique, torn, and creased media
- Media jams
- Decrease in print quality due to blurring, missing, or smudging of ink
- End detection error of roll media

Problems caused by using media other than the recommended will void the warranty. For more information, contact your local XEROX dealer.

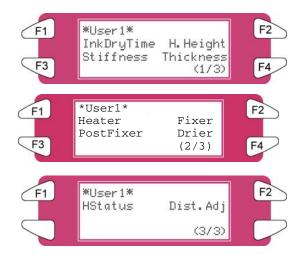

Setup items	Parameters	Description
User 1-8 (1/3)	InkDryTime In order to let the ink for the printing dry, the time between the	
	of the print and the beginning of the next print is set.	
	H.Height	Sets the distance (head height) between the print head and the
		media.
	Stiffness	Makes the setting on the stiffness of the media to be used.
	Thickness	Makes the setting on the thickness of the media to be used.
User 1-8 (2/3)	Heater	Sets the temperature of the Heater.
	Fixer	Sets the temperature of the Fixer.
	PostFixer	Sets the temperature of the PostFixer.
	Drier	Sets the temperature of the Drier.
User 1-8 (3/3)	HStatus	Checks the temperature of heating elements.
	Dist.Adj	Performs various settings for media feed compensation.
User 1-8 (1/3-3/3)	-	[CANCEL] key: to shift to the previous hierarchy menu.

4.3.1.7 InkDryTime Menu

Set the waiting period between the end of operation and the start of next printing in order to let the printed media dry.



Setup items	Parameters	Description
InkDryTime	0 to <30 sec. > to 270 sec. to 60 min.	To change the InkDryTime by operating the
		following keys.
		• [F2] key: to increase the setup value.
		• [F4] key: to decrease the setup value.
		• [ENTER] key: to confirm the setup value
		• [CANCEL] key: to cancel the setup value

4.3.1.8 <u>H. Height Menu</u>

Set the distance (head height) between the print head and the media. Head height can be changed to three levels according to media thickness.



Setup items	Parameters	Description
HeadHeight	low	When using media with a thickness of 80µm to 300µm
	middle	When using media with a thickness of 300µm to 700µm
	Hhgh	When using media with a thickness of 700µm to 1000µm
	-	(1 μm = 0,001 mm)


⚠ Notes ⚠

Set the height of the head in relation to the thickness of the media.

- If the setting is set to "High" and the print is created on thin media, good quality print results will not be achieved.
- If the setting is set to "Low" and thick media is used, the media and print head will come into contact and may result in damage to the product.

4.3.1.9 Stiffness Menu

Set the media sticking force (media stiffness) to the media guide.



Setup items	Parameters	Description
Stiffness	Soft	Setting for soft media where media feeding errors
		and media jams occur.
	Normal	Setting for normal media.
	-	After setting, shift to the previous hierarchy menu.

4.3.1.10 Thickness Menu

Set the media thickness.



Setup items	Parameters	Description
Thickness	50μm-<100μm>1500μm	Change media thickness by operating the following keys. • [F2] key: to increase the setup value.
		• [F4] key: to decrease the setup value.
		[ENTER] key: to confirm the setup value [CANCEL] key: to cancel the setup value

⚠ Notes ⚠

Bidirectional quality can only be obtained when media thickness is set correctly

4.3.1.11 <u>Heater (A) Menu</u>

Set the temperature of the Heater.



Setup items	Parameters	Description
Heater (A)	OFF – 50°C	Change heater temperature by operating the following
		keys.
		• [F2] key: to increase the setup value.
		• [F4] key: to decrease the setup value.
		[ENTER] key: to confirm the setup value
		• [CANCEL] key: to cancel the setup value

⚠ Notes ⚠

- The default setting for the heater is set to '50°C'.
- The function of the heater (A): Warming the transfer paper before entering the pressure rollers. The pre-expansion helps to minimize media cockling.

4.3.1.12 Fixer (B) Menu


Set the temperature of the Fixer.



Setup items	Parameters	Description
Fixer (B)	OFF – 40°C	Change fixer temperature by operating the following keys.
		• [F2] key: to increase the setup value.
		• [F4] key: to decrease the setup value.
		• [ENTER] key: to confirm the setup value
		• [CANCEL] key: to cancel the setup value

4.3.1.13 Post Fixer (C) Menu

Set the temperature of the Post Fixer.



Setup items	Parameters	Description
Post Fixer (C)	OFF – 50°C	Change post fixer temperature by operating the following keys.
		• [F2] key: to increase the setup value.
		• [F4] key: to decrease the setup value.
		• [ENTER] key: to confirm the setup value
		• [CANCEL] key: to cancel the setup value

4.3.1.14 <u>Drier (D) Menu</u>

Set the temperature of the Drier.



Setup items	Parameters	Description
Drier	OFF – 50°C	Change drier temperature by operating the following keys.
		 [F2] key: to increase the setup value.
		• [F4] key: to decrease the setup value.
		 [ENTER] key: to confirm the setup value
		• [CANCEL] key: to cancel the setup value

■ Notes

- The default setting for the drier is set to '50°C'.
- The function of the drier (D): Heating the printed transfer paper evaporates the water fast enough so that the print is touch-dry when wound.

4.3.1.15 <u>HStatus Menu</u>

Check the temperature of the heating elements.



⚠ Notes ⚠

A stands for the Heater.

B stands for the Fixer.

C stands for the Post Fixer.

D stands for the Dryer.

Press the [CANCEL] key to go to the previous menu.

4.3.1.16 <u>Dist. Adj Menu</u>

To perform various settings for media feed compensation

⚠ Notes ⚠

For details of the distance adjustment, refer to "Distance adjustment".



Setup items	Parameters	Description
Dist.Adj	Print1	Performs printing by media feed compensation. A correction pattern with a width of \pm 0.20% (in steps of 0.10 %) is printed around the centre of the correction value currently set.
	Change	Changes the media feed compensation value. The menu changes to the Change Media Feed Correction Value menu.
	Print2	Performs printing by media feed compensation (for fine adjustment). A correction pattern with a width of \pm 0.02% (in steps of 0.01%) is printed around the centre of the correction value currently set.
	-	[CANCEL] key: Shifts to the previous hierarchy menu.

4.3.1.17 Change menu

Change the distance adjustment value.



Setup items	Parameters	Description
Change	90.00%-<100.00%>-110.00%	Changes the media feed compensation value by operating the following keys. • [F2] key: to increase the setup value. • [F4] key: to decrease the setup value. • [ENTER] key: to confirm the setup value • [CANCEL] key: to cancel the setup value

4.3.1.18 <u>Dist.Adj Menu</u>


Indicates that the Distance Adjustment test print is printing.



Setup items	Parameters	Description
Dist.Adj	Data printing	Now printing by media feed compensation. Wait for
		a while until printing has been finished.
	-	• [CANCEL] key: to perform following operations :
		 Media feed correction printing has been finished.
		To eject media.
		 To shift to the previous hierarchy menu.

4.3.1.19 SheetSize Menu

When loading a sheet of media, set the method for detecting the size of the media.



Setup items	Parameters	Description
SheetSize	<auto></auto>	The length and width of the sheet media is automatically detected.
	Length	When placing normal size sheet media vertically on the tray.
	Width	When placing normal size sheet media horizontally on the tray.
	-	After setting, shift to the previous hierarchy menu.

⚠ Notes ⚠

- When using sheet media other than recommended media, set to "blank form vertical" or "blank form horizontal".
- The following size of sheet media can be set.
 - o ISO series (A0, A1, A2, A3, A4)
 - o JIS series (B1, B2, B3, B4)
 - o ARCH series (A, B, C, D)

4.3.1.20 TopFeed Menu


Set the amount of media to be fed when printing begins. Make this setting when using roll media.



Setup items	Parameters	Description
TopFeed	<0mm>-400mm	To feed media at the start of printing. Set when printing on roll media. • [F2] key: to increase the setup value. • [F4] key: to decrease the setup value. • [ENTER] key: to confirm the setup value
		• [CANCEL] key: to cancel the setup value

4.3.1.21 MediaCut Menu

Set media cut method after printing.



Setup items	Parameters	Description
Media cutting	Auto	After printing has been completed, the media is sent to the media cut
		position and is automatically cut.
	Manual	Feed media to the media cut position after printing.
		Use regular cutting blades available from hardware stores.
	Off	No media feed after printing.
	-	When "Auto" is selected, proceed to the Shortest Cut Length menu.
		• If "Manual" or "Off" has been selected, the screen changes to the menu
		of the previous hierarchy.

⚠ Notes ⚠


- For the situations shown below, the media cut settings are always changed to "Off" regardless the
 previous settings.
 - When "Take-up system" or "Roll-up/roll off system" is set for the media detection settings (Media detection menu)
- When using the media shown below, set the media cut setting to "Manual". If set to "Auto", the following errors may occur:
 - o Cloth material: The cloth fibre is not completely cut.
 - o Media with glue: Glue will adhere to the cutting blade and decrease cutting performance.

4.3.2 Setup Menu 2/7



4.3.2.1 PrintMode Menu

To perform various settings for Printing mode.



Setup items	Parameters	Description
PrintMode	Print mode 1	For each setup value of Printing mode, four settings of "Printing
	Print mode 2	mode 1" - "Printing mode 4" can be set.
	Print mode 3	
	Print mode 4	
	-	[CANCEL] key: to shift to the previous hierarchy menu.

4.3.2.2 PrnMode Menu


Perform various settings for Print mode. For each setup value of Print mode, four settings of "Printing mode 1" - "Printing mode 4" can be set.



Setup items	Parameters	Description
PrnMode 1-4 (1/2)	Printing condition	To set printing quality.
	Printing direction	To set print head moving direction for printing.
	Repeat printing	To make settings for the repeat print.
	Head speed	To set the head speed
PrnMode 1-4 (2/2)	Weaving	To set which weaving pattern should be used for printing
	ScanWidth	To specify the carriage movement
PrnMode 1-4	-	[CANCEL] key: To shift to the previous hierarchy menu.

4.3.2.3 Condition Menu

Select the required printing quality.

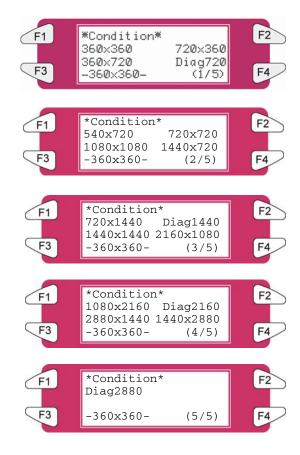

Setup items	Parameters	Description
Condition (1/5)	360 × 360dpi	The display changes to interlace setup items after the print
	720 × 360dpi	quality items settings have been finished.
	360 × 720dpi	
	Diag720dpi	
Condition (2/5)	540x720dpi	
	720x720dpi	
	1080x1080dpi	
	1440x720dpi	
Condition (3/5)	720x1440dpi	
	Diag1440 dpi	
	1440x1440dpi	
	2160x1080dpi	
Condition (4/5)	1080x2160dpi	
	Diag2160dpi	
	2880x1440dpi	
	1440x2880dpi	
Condition (5/5)	Diag2880dpi	
Condition (1/5 – 5/5)	-	[CANCEL] key: To shift to the previous hierarchy menu.

4.3.2.4 <u>Direction Menu</u>

Set print head moving direction for printing.



Setup items	Parameters	Description
Direction	UniDir.	Prints in one direction.
	BiDir.	Prints bi-directionally.
	-	[CANCEL] key: To shift to the previous hierarchy menu.

4.3.2.5 RepeatPrn Menu

Make settings for the repeat print.



Setup items	Parameters	Description	
RepeatPrn	Count	To set the number of repeats per line of printing.	
	IntervalTime	To set interval time for the repeat print.	
	-	[CANCEL] key: To shift to the previous hierarchy menu.	

4.3.2.6 <u>Count Menu</u>


Set the number of repeats per line of printing.



Setup items	Parameters	Description
Count	<once> to 99 times</once>	To change repeat times by operating the following keys:
		• [F2] key: to increase the setup value.
		• [F4] key: to decrease the setup value.
		• [ENTER] key: to confirm the setup value
		• [CANCEL] key: to cancel the setup value

4.3.2.7 <u>IntervalTime Menu</u>

Set interval time for the repeat print.



Setup items	Parameters	Description
IntervalTime	<0.0 sec.> to 0.1 to 5.0 sec.	To change interval time by operating the following keys.
		• [F2] key: to increase the setup value.
		• [F4] key: to decrease the setup value.
		• [ENTER] key: to confirm the setup value
		• [CANCEL] key: to cancel the setup value

4.3.2.8 <u>HeadSpeed Menu</u>

Only applicable when printing in 360dpi.



Setup items	Parameters	Description
HeadSpeed	Normal	Print at normal speed of 360 dpi
	Fine	Print at the speed of 720 dpi (slower – more drying time)
- [CANCEL] key: To shift to the previous hierarchy mer		[CANCEL] key: To shift to the previous hierarchy menu.

4.3.2.9 Weaving Menu



Without weaving ON, an image is completed (formed) by printing a series of complementary rectangular shaped stripes (bands, swaths, passes). Inherent to classic inkjet printing is that ink drying effects, stepping mismatch, miss firing nozzles show up in the printed image via ink bleeding and various types of banding. By switching ON one of the weave patterns you will give the traditional rectangular print swaths a wave-shaped look that will save you time and boost your output quality. Difficult images will print smoother, banding will be suppressed (neutralized) and you will have to spend less time fine-tuning your printer to create great looking output.

Moreover, when using wave-tuned profiles, you will be able to boost your printer's colour gamut as the i² (intelligent interweaving) technology allows depositing more ink, helping you to achieve higher colour densities.





Setup items	Parameters	Description	
Weaving (1/2)	Sign / Quality		
	Picture / Speed	Diagon refer to the table below to know what the different weaving	
Weaving (2/2)	Stitch	Please refer to the table below to know what the different wear forms are and which one to use.	
	Classic		
	Off		
Weaving (1/2 – 2/2)	-	[CANCEL] key: To shift to the previous hierarchy menu.	


Weaving method	User Tip	Print Modes Supported	2 pass	4 pass
Sign / Quality	Preferred setting for signage/poster applications containing big areas with solid colours or critical gradients and for photo quality output on coated media. (small loss of speed in 2 pass modes)	720x720 2 pass 4 pass 540x720 2 pass 4 pass Default selection after firmware installation		
Picture / Speed	Preferred setting for non-sign images, pictures, continuous tone data. (no speed loss)	720x720 2 pass 4 pass 540x720 2 pass 4 pass 4 pass 4 pass (*) 4-pass is a quality mode and will always use a tuned sign weave pattern, even if picture is selected from the panel / RIP.		
Stitch	Creates a fine print swath overlap. Mildly improves print quality versus "Off" setting. (lowest level of interweaving)	720x720		
Classic	Use classic to maintain classic printer behaviour in all print modes. (prior to firmware version 3.01)	All print modes		
Off	Switches off any kind of overlap/weaving. Useful when trying to inspect individual nozzle behaviour or checking the stepadjust.	All print modes		

4.3.2.10 ScanWidth Menu

It is possible to specify the carriage movement along the media – printed area. This will have a direct effect on the drying time!! Please find more details below.



Setup items	Parameters	Description	Drying time
ScanWidth	DataWidth	Carriage moves only over the printing area	Short
	MediaWidth	Carriage moves over the media	Depending on MediaWidth
	FullWidth	Carriage moves over the full width	Long

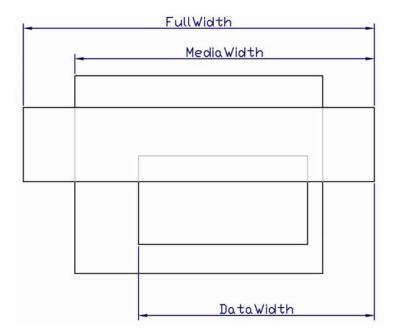

4.3.2.11 Command Menu


Perform various settings for printer commands.



Setup items	Parameters	Description
Command (1/2)	Step	To set the units for amount of movement for printing.
	Resolu.	Makes settings for image resolution while printing with image data.
	OnlineTimer	Makes settings for the time between the end of receiving printing
		data from a computer and recognizing the end of printing data.
	-	[CANCEL] key: to shift to the previous hierarchy menu.

4.3.2.12 Step Menu

Set the units for amount of movement for printing.



Setup items	Parameters	Description
Step	<0.010mm>	To set the printing units to 0.010mm.
	<0.025mm>	To set the printing units to 0.025mm.
	-	To shift to the previous hierarchy menu.


⚠ Notes ⚠

Please note that some software packages use the "step per mm" terminology, in which case a program step of 0.025 mm corresponds with 40 steps per mm and a program step of 0.010 mm with 100 steps per mm.

4.3.2.13 Resolu. Mmenu

Set resolution for image data for printing.





Setup items	Parameters	Description
Resolu. (1/2)	360dpi	Makes settings for image resolution while printing with image data.
	600dpi	
	720dpi	
	1080dpi	
Resolu. (2/2)	1200dpi	
	1440dpi	
	2160dpi	
	2880dpi	
Resolu. (1/2-2/2)	-	To shift to the previous hierarchy menu.

4.3.2.14 OnlineTimer Menu

Set time from the moment of receiving termination of printing data sent by computer to the recognition of end of printing data.



Setup items	Parameters	Description
OnlineTimer	OFF/2sec <30sec.> -	To change the Online time out time by operating
	800sec.	the following keys.
		• [F2] key: to increase the setup value.
		• [F4] key: to decrease the setup value.
		 [ENTER] key: to confirm the setup value
		 [CANCEL] key: to cancel the setup value

4.3.2.15 Layout Menu

Make various settings on layout function.

⚠ Notes ⚠

The layout function automatically determines the size of printing data sent from the computer, and then determines the amount of roll media required without wasting media. If sheet media has been loaded, the layout function is disabled.



Setup items	Parameters	Description
Layout	Joint	Makes settings for stitching print.
	CtPos	To set the media cutting position after printing has been completed.
	-	[CANCEL] key: To shift to the previous hierarchy menu.

4.3.2.16 Joint Menu

Set joint printing.



Setup items	Parameters	Description
Joint	<off></off>	Does not perform stitching print.
	On	Performs stitching print
	-	- Shifts to the previous hierarchy menu.

4.3.2.17 <u>CutPos. Menu</u>

Set the media cutting position after printing has been finished.



Setup items	Parameters	Description
CutPos.	Standard	To cut the media to fit the media width, so that it meets the regulated size.
	<data></data>	To cut the media according to the size of the printing data.
	-	- Shifts to the previous hierarchy menu.

4.3.2.18 Function Menu

Perform various settings for processing of printing data.



Setup items	Parameters	Description
Function	CMY→K Makes settings for printing method to present black.	
	Scale	Sets the enlargement and reduction ratios for printing data.
	Mirror	To draw reversed printing data.
	-	• [CANCEL] key: Shifts to the previous hierarchy menu.

4.3.2.19 <u>CMY → K Menu</u>

Replace CMY values with K (black)



Setup items	Parameters	Description
CMY→K	<no></no>	 If MH-GL, GL2 are set on the Command Settings menu, be sure to use CMY (mixed colours) ink. If RTL-PASS is set, use both CMY (mixed colours) ink and K (black) ink.
	Yes	Always use K (black) ink.
	-	To shift to the previous hierarchy menu.

4.3.3 <u>Setup Menu</u> <u>3/7</u>



4.3.3.1 RollSetup Menu

Perform various settings for roll media.



Setup items	Parameters	Description
RollSetup	Disable	Set this when roll media setup is not used.
	Roll1	For each setup value of roll media, 3 settings of "Roll media 1" - "Roll
	Roll2	media 3" can be set.
	Roll3	
	-	• [CANCEL] key: To shift to the previous hierarchy menu.

4.3.3.2 Roll Menu


Set media roll length.



Setup items	Parameters	Description
Roll 1-4	1 m to <30 m>to 99 m	To change roll media length by operating the following keys. • [F2] key: to increase the setup value. • [F4] key: to decrease the setup value. • [ENTER] key: to confirm the setup value • [CANCEL] key: to cancel the setup value

4.3.3.3 <u>Centro. Menu</u>

Set communication mode to Centronics interface.



Setup items	Parameters	Description
Centro.	Centro.	To set communication mode to Centronics mode.
	.Bi Centro.	To set communication mode to Bi-Centronics mode.
	-	To shift to the previous hierarchy menu.

4.3.3.4 Network Menu

Make the settings for the network interface.

⚠ Notes ⚠

The Network Settings menu is displayed if the network interface board has been installed. Be sure to consult the network administrator before making the settings in the Network Settings menu.



Setup items	Parameters	Description
Network (1/1)	IPaddress	To set the IP address of the product.
	SubnetMask	To set the subnet mask of the product.
	Gateway	To set the IP address of the connected gateway.
Network	-	• [CANCEL] key: To shift to the previous hierarchy menu.

4.3.3.5 IPaddress Menu

Set the IP address of the product.



Setup items	Parameters	Description
IPaddress	<000.000.000.000>-	Use the following keys to change the IP address.
	223.255.255.254	• [F1] key: Moves one digit to the left on the setting value to be changed.
		• [F2] key: Increases the setting value.
		• [F3] key: Moves to the right on the setting value.
		• [F4] key: Reduces the setting value.
		• [ENTER] key: to confirm the setup value
		• [CANCEL] key: to cancel the setup value

4.3.3.6 SubnetMask Menu

Set the subnet mask of the product.



Setup items	Parameters	Description
SubnetMask	000.000.000	Use the following keys to change the Subnet Mask.
	<255.255.255.000>	• [F1] key: Moves one digit to the left on the setting value to be changed.
	255.255.255	• [F2] key: Increases the setting value.
		• [F3] key: Moves to the right on the setting value.
		• [F4] key: Reduces the setting value.
		• [ENTER] key: Sets the setting value, and moves the screen to the
		menu of the previous hierarchy.
		• [CANCEL] key: Cancels the setting value, and moves the screen to the
		menu of the previous hierarchy.
		Refer to 'Network setting menu'

4.3.3.7 Gateway Menu

The product sets the IP address of the connected gateway.




Setup items	Parameters	Description
Gateway	<000.000.000.000> -	Use the following keys to change the IP address.
	223.255.255.254	• [F1] key: Moves one digit to the left on the setting value to be changed.
		• [F2] key: Increases the setting value.
		• [F3] key: Moves to the right on the setting value.
		• [F4] key: Reduces the setting value.
		• [ENTER] key: to confirm the setup value
		[CANCEL] key: to cancel the setup value

4.3.4 <u>Setup Menu 4/7</u>



4.3.4.1 <u>Utility menu</u>

Perform various settings for application functions of products.

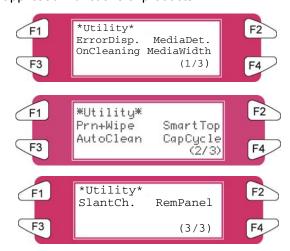

Setup items	Parameters	Description
Utility (1/3)	ErrorDisplay	To set display method to the operation panel when minor error
		occurred.
	MediaDet.	When media has been initialized, to perform detection of width
		and front edge of the media.
	OnCleaning	Cleaning should be performed automatically when the power is
		turned on.
	MediaWidth	If media detection is not performed for initial media, to set the
		width of the media in the tray.
Utility (2/3)	Prn+Wipe	To wipe while printing, to take care of possible condensation
		on the print head nozzle plate.
	SmartTop	The ideal temperature of the media is near to the preheater.
		This area of paper is fed before a print starts to obtain perfect
		quality.
	AutoClean	Performs cleaning cycle while printer is idle at the set
		temperature.
	CapCycle	To perform auto tubing flush when printer is idle.
Utility (3/3)	SlantCh.	Whether to perform a SlantCheck or not.
	RemPanel	Enables Remote Panel software access.
Utility (1/3 – 3/3)	-	• [CANCEL] key: To shift to the previous hierarchy menu.

4.3.4.2 ErrorDisp. Menu


To set display method to the operation panel when minor error occurred.



Setup items	Parameters	Description
ErrorDisp.	Off	No ErrorDisplay.
	On	To perform ErrorDisplay.
	-	To shift to the previous hierarchy menu.

4.3.4.3 PaperDet. Menu

To perform detection of width and edge of the media, when media has been initialized



Setup items	Parameters	Description
PaperDet.	Normal	To perform media detection automatically.
	OFF	No media detection.
	TakeUpRoll	Should be selected when using the winding system and media is most right loaded.
	RollFeed	Should be selected when using the winding system and media is centre loaded
	-	• [CANCEL] key: to shift to the previous hierarchy menu.

⚠ Notes ⚠

- The default setting is 'RollFeed' as a result of the standard unwinder / winder 100 with your unit.
- When setting "Take-up Mechanism" on the Media Detection menu, the following limits are applied to the operation of the product.
 - o For initial media, only the media width is detected.
 - o Under normal conditions, media cannot be sent backward.
 - The media cannot be moved forward or backward from the Origin Setting menu.
 - The settings in the Media Cut menu are disabled, and the settings are changed to "Off". (Refer to 'Media cut menu')

4.3.4.4 OnCleaning Menu

Set when cleaning should be performed automatically when the power is turned on.



Setup items	Parameters	Description
OnCleaning	<off></off>	Power on cleaning is not performed.
	Little	
	Normal	Power on cleaning is performed.
	Powerful	
	-	To shift to the previous hierarchy menu.

4.3.4.5 MediaWidth Menu

If media detection has not been performed during initialization, the width of the media is set here. It can be set in the following ranges: 90" model: 210mm-2240mm

⚠ Notes ⚠

On the media width menu,

- If a value larger than the width of the media has been set, media or the product may be contaminated by the ink during printing.
- If a value smaller than the width of the set media has been set, media may not be cut correctly.



Setup items	Parameters	Description
MediaWidth	210mm - <841mm> -	To change media width by operating the following keys.
	2240mm	• [F2] key: to increase the setup value.
		• [F4] key: to decrease the setup value.
		[ENTER] key: to confirm the setup value
		• [CANCEL] key: to cancel the setup value

4.3.4.6 Prn+Wipe Menu

To take care of possible condensation on the head nozzle plate, it is possible to wipe while printing.



Setup items	Parameters	Description
Prn+Wipe	OFF	No wiping during printing
	High	After printing 10 passes, wiping cycle will be performed.
	Middle	After printing 16 passes, wiping cycle will be performed.
	Low	After printing 22 passes, wiping cycle will be performed.
	-	• [CANCEL] key: To shift to the previous hierarchy menu.

4.3.4.7 SmartTop Menu

This feature will take care of a feed of 5 centimetres before every print. To start printing on media which is pre heated. This function will only be visible when the B heater is activated.



Setup items	Parameters	Description
SmartTop	Off	No media feed of 5 centimetres
	ON	A media feed of 5 centimetres
	-	• [CANCEL] key: to shift to the previous hierarchy menu.

4.3.4.8 AutoClean Menu

Printer performs an automatic cleaning before or during printing. Or during an idle period of 1 hour of more.



Setup items	Parameters	Description
AutoClean	Waiting	To perform a little, normal, powerful cleaning while printer is
		idle for 1, 2, 3, 4, 5, 6, 9, 12, 18, 24 hours.
	Printing	To perform a little, normal, powerful cleaning after 5, 10, 15,
		20, 30, 45, 60, 90, 120, 150,180 minutes of printing.
	Before Printing	To perform a little, normal, powerful a cleaning before every
		job
	-	• [CANCEL] key: to shift to the previous hierarchy menu.

4.3.4.9 CapCycle Menu

Perform a TubingFlush every 1 to 24 hours.

⚠ Notes ⚠

A TubingFlush is automatically performed after 10 minutes of idle and before shut down of the printer.



Setup items	Parameters	Description
CapCycle	OFF	No tubing flush will be performed
	1 – 6 - 24 hours	Every 1 – 24 hours (adjustable) a TubingFlush is performed.
	-	• [CANCEL] key: To shift to the previous hierarchy menu.

4.3.4.10 SlantCh. Menu

To enable or disable whether the printer performs a slant check after every print of at least 1 meter.



Setup items	Parameters	Description
SlantCh.	Off	No SlantCheck
	On	Perform SlantCheck
	-	• [CANCEL] key: To shift to the previous hierarchy menu.

4.3.4.11 RemPanel Menu


Enables or disables using Remote Panel software.



Setup items	Parameters	Description
RemPanel.	Off	Remote panel usage is disabled.
	On	Remote panel usage is enabled.
	-	• [CANCEL] key: To shift to the previous hierarchy menu.

4.3.4.12 <u>Initial.</u> <u>Menu</u>

Return parameters to the factory settings.

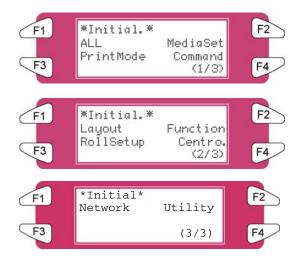

Setup items	Parameters	Description
Initial. (1/3)	All	Returns all parameters to the factory setting.
	MediaSet	Returns parameters in the media setup menu to the factory setting.
	PrintMode	Returns parameters in the print mode menu to the factory setting.
	Command	Returns parameters in the command setup menu to the factory setting.
Initial. (2/3)	Layout	Returns parameters in the layout setup menu to the factory setting.
	Function	Returns parameters in the function setup menu to the factory setting.
	RollSetup	Returns parameters in the roll media setup menu to the factory setting.
	Centro	Returns parameters in the Centronics setup menu to the factory setting.
Initial. (3/3)	Network	Returns parameters in the network setup menu to the factory setting.
	Utility	Returns parameters in the utility setup menu to the factory setting.
Initial. (1/3-3/3)	-	• [CANCEL] key: Shifts to the previous hierarchy menu.

4.3.4.13 All Menu

All setup values are set to the factory default settings.



Setup items	Parameters	Description
All	NO	No initialization.
	OK	To perform initialization.
	-	After setting, to shift to the previous hierarchy
		menu.

4.3.4.14 MediaSet Menu

Setup values of Media setup menu are set to the factory default settings.



Setup items	Parameters	Description
MediaSet	<no></no>	No initialization.
	OK	To perform initialization.
	-	After setting, to shift to the previous hierarchy menu.

4.3.4.15 PrintMode Menu

Setup values of Printing mode menu are set to the factory default settings.



Setup items	Parameters	Description
PrintMode	<no></no>	No initialization.
	OK	To perform initialization.
	-	After setting, to shift to the previous hierarchy
		menu.

4.3.4.16 Command Menu

Setup values of Command Setup menu are set to the factory default settings.



Setup items	Parameters	Description
Command	<no></no>	No initialization.
	OK	To perform initialization.
	-	After setting, to shift to the previous hierarchy
		menu.

4.3.4.17 <u>Layout Menu</u>

Setup values of Layout Setup menu are set to the factory default settings.



Setup items	Parameters	Description
Layout	<no></no>	No initialization.
	OK	To perform initialization.
	-	After setting, to shift to the previous hierarchy
		menu.

4.3.4.18 Function Menu

Setup values of Function setup menu are set to the factory default settings.



Setup items	Parameters	Description
Function	<no></no>	No initialization.
	OK	To perform initialization.
	-	After setting, to shift to the previous hierarchy
		menu.

4.3.4.19 RollSetup Menu

Setup values of Roll Media setup menu are set to the factory default settings.



Setup items	Parameters	Description
RollSetup	<no></no>	No initialization.
	OK	To perform initialization.
	-	After setting, to shift to the previous hierarchy
		menu.

4.3.4.20 <u>Centro.</u> <u>Menu</u>

Setup values of Centronics menu are set to the factory default settings.



Setup items	Parameters	Description
Centro.	<no></no>	No initialization.
	OK	To perform initialization.
	-	After setting, to shift to the previous hierarchy
		menu.

4.3.4.21 Network Menu

Setup values of Network menu are set to the factory default settings.



Setup items	Parameters	Description
Network	<no> No initialization.</no>	
	OK	To perform initialization.
	-	After setting, to shift to the previous hierarchy
		menu.

4.3.4.22 Utility Menu

Setup values of Utility menu are set to the factory default settings.



Setup items	Parameters	Description
Utility	<no></no>	No initialization.
	OK	To perform initialization.
	-	After setting, to shift to the previous hierarchy
		menu.

4.3.5 <u>Setup Menu 5/7</u>




4.3.5.1 <u>DataDump Menu</u>

To perform dump printing for online function check.



	Parameters	Description
DataDump	Start/End	Dump printing is used by service persons to check the functions of the printer. Do not use this function for normal printing.
	All	
	-	[CANCEL] key: To exit Dump Mode. To shift to the previous hierarchy menu.

4.3.5.2 InkManager Menu

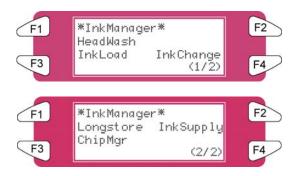

Setup items	Parameters	Description	
InkManager	Head Wash	To perform a head cleaning.	
(1/2)	Ink Load	To load ink.	
	Ink Change	To change ink configuration (2x4 → 1x6)	
InkManager	LongStore	To store your printer for a long time. (8365/8390 Only)	
(2/2)	InkSupply	To switch between the Bulk Ink System for 8365/8390 and ink cassettes.	
	ChipMgr	To switch between cassette and printer mode	
	-	• [CANCEL] key: shift to the previous hierarchy menu.	

4.3.5.3 HeadWash Menu

To perform a head wash to remove all ink of the ink supplying system.



Setup items	Parameters	Description
HeadWash	No	Do not wash the ink supplying system.
	Yes	To wash the ink supplying system.
	-	• [CANCEL] key: shift to the previous hierarchy
		menu.

⚠ Notes ⚠

Only after two head wash cycles it is possible to change ink types. Use the 'Ink Load' to load ink

The process consists of several cleaning loadings, several air loadings and one ink loading. On the display of the operation panel a time indication is mentioned on the fourth line.

Mess	age	Time
1.	Please remove cart.	
2.	Ink Discharge	7
3.	Please insert Cleaning cart	
4.	During washing wait for a while	29
5.	Remove cassettes	
6.	During washing wait for a while	7
7.	The end	
8.	Ink Load	13

4.3.5.4 InkLoad Menu

Start and stop an ink load.



Setup items	Parameters	Description
InkLoad	Pump 1	Load ink into head 1 and 2
	Pump 2	Load ink into head 3 and 4
	ALL	Load ink for complete system
	-	• [CANCEL] key: shift to the previous hierarchy
		menu.

4.3.5.5 InkChange Menu

Change the ink configuration (from 2x4 to 1x6 or opposite).



Setup items	Parameters	Description
InkChange	No	Do not perform an ink change.
	Yes	To start the ink change cycle.
	-	• [CANCEL] key: shift to the previous hierarchy
		menu.

⚠ Notes ⚠

To reduce the consumption of ink and cleaning liquid it is recommended to change ink types by using the 'Ink Change' cycle.

The process consists of several cleaning loadings, several air loadings and one ink loading. On the display of the operation panel a time indication is mentioned on the fourth line.

Mes	sage	Time
1.	Please remove cart. (*)	
2.	Ink Discharge (*)	1
3.	Please insert Cleaning cart (*)	
4.	During washing wait for a while (*)	5
5.	Remove cassettes	
6.	During washing wait for a while	7
7.	Please insert ink cart.	
8.	Ink refill	13
9.	The end	

(*) = This will be asked 5 times.

4.3.5.6 <u>Longstore Menu</u> (8365/8390 Only)

When storing the printer for longer than 5 days, ink cassettes with 8365/8390 Cleaning liquid should be installed. For more details, please refer to maintenance cycle.



Setup items	Parameters	Description
Longstore	No Do not perform a long store	
	Yes	Perform the long store procedure.
	-	• [CANCEL] key: shift to the previous hierarchy
		menu.

The process consists of several cleaning loadings, several air loadings and one ink loading. On the display of the operation panel a time indication is mentioned on the fourth line.

Mes	sage	Time
1.	Please remove cart.	
2.	Ink Discharge	
3.	Please insert Cleaning cart.	29
4.	During washing wait for a while	29
5.	Ink not filled [ALL]	
6.	Power OFF	

⚠ Notes ⚠

When a cleaning cassettes is empty during LongStore procedure, remove the empty one and replace it by a new one. Only the last cycle will be repeated. Although, the full time (29 minutes) is mentioned again on the panel.

After powering OFF the machine, the tubings in the waste bottle should be mounted on the nipple plate at the bottom of the machine. This to prevent air is coming in the ink system which will dry out the heads.



Nipple plate

How to load ink after a long store procedure?

Message		Time
1.	Power ON without Ink Cassettes installed.	
2.	Insert Cartridges	13
3.	Auto InkFill	

⚠ Notes ⚠

When powering ON and INK cassettes are already installed, the message "Not Original Ink" will be displayed. Remove 1 and reinsert it, then the procedure will continue.

4.3.5.7 InkSupply menu

This setting should be enabled (ON) when using the Bulk Ink System.

Please refer to the user's Guide of the Bulk Ink System to know how to install and use it.




Setup items	Parameters	Description
InkSupply	Off	Using ink cassettes
	On	Using the Bulk Ink System
	-	• [CANCEL] key: shifts to the previous menu.

4.3.5.8 ChipMgr menu



Setup items	Parameters	Description
ChipMgr	Cassette	Use the smart chips on the ink cassettes
	Printer	Use the smart chip manager system on the top (or back) of the machine. Recommended when working with a Bulk Ink System.
	-	• [CANCEL] key: shifts to the previous menu.

4.3.6 Setup Menu 6/7



4.3.6.1 H.Unlock Menu




Setup items	Parameters	Description
H.Unlock	No	Cancels unlocking the carriage.
	Yes	Unlocks the carriage.
	-	• [CANCEL] key: shifts to the previous hierarchy menu.

4.3.6.2 WiperClean Menu

Clean the wipers.

⚠ Notes ⚠ Refer to "Cleaning the cleaning wiper" for details regarding the procedure for cleaning the cleaning wiper.





-> ENTER

Setup items	Parameters	Description
WiperClean	erClean No Do not clean the cleaning wiper.	
	Yes	To clean the cleaning wiper.
	-	• [CANCEL] key: shifts to the previous hierarchy menu.

4.3.6.3 TankCng. Menu

Change the waste fluid tank. Set when changing the waste fluid tank.

⚠ Notes ⚠

Refer to "Replacing the waste liquid tank" for details regarding the procedure for changing the waste fluid tank.



Setup items	Parameters	Description
TankCng. Cancel Do not change the t		Do not change the tank.
	Enter	When tank has been changed.
	-	• [CANCEL] key: shifts to the previous hierarchy menu.

4.3.6.4 <u>TubingFlush Menu</u>

Removes rest fluids out of the capping station and waste tubes to prevent clogging.


⚠ Notes ⚠

The tubing flush sequence will not remove fluids out of the head nor out of the ink supply tubes. Please refer to the Periodical Services for the daily and weekly maintenance of the 8265/8290/8365/8390.

The tubing flush feature includes following sequence:

- **1.** The head is moved away from the capping position.
- 2. Pump sequence is started.
- 3. Pumps are stopped and head is re-capped.


The tubing flush can be started via the "TubingFlush" menu.



⚠ Notes ⚠

A tubing flush will also be performed before powering OFF the printer.

On the display following text appears:




The pumps turn for a certain time. Press ENTER as they stop. To stop the pump motors earlier, press ENTER during the pump cycle.

4.3.7 Setup Menu 7/7



4.3.7.1 <u>VersionCheck Menu</u>


Check the installed firmware and heater system version.



Setup items	Parameters	Description
Version Check	-	• [CANCEL] key: shift to the previous hierarchy
		menu.

4.3.7.2 <u>Area Menu</u>

View the total area of media printed on the machine.



Setup items	Parameters	Description
Area	Total	Total area of media.
	-	 [CANCEL] key: shift to the previous hierarchy
		menu.

4.4 OPERATING FROM THE CONTROL PANEL

This section describes functions operated on the operational panel when the printer is in the normal status.

⚠ Notes ⚠

For information of the name and function of each key, refer to "Operation panel".

4.4.1 Feeding Media

When you want to feed media forward or backward, follow the steps below:


Step 1: Verify the following regarding the condition of the printer.

I) It is not currently printing



Step 2: Press the [F1] key of the operation panel.

I) To shift to the feed & reel menu.



Step 3: Press the [F2] key of the operation panel.

I) To shift to the Dist.Adj menu.



Setup items	Parameters	Description
Change Dist.Adj	90.00%-110.00%	Change the distance adjustment value by operating the
		following keys.
		• [F2] key: to increase the setup value.
		• [F4] key: to decrease the setup value.
		• [ENTER] key: to confirm the setup value
		[CANCEL] key: to cancel the setup value

Step 4: Press the [F3] key or the [F4] key on the operation panel.

I) The product will perform following operations:

Setup items	Key name	Parameters	Description
Cut & Feed	F3	Forward	Feeds media forward.
	F4	Backward	Feeds media backward.

⚠ Notes ⚠

If "Take-Up Roll" is set in the media detection setup menu, the product will not operate even if the [F4] key has been pressed.

4.4.2 Controlling the Heater Elements

If you want to change or check the heater elements, follow the steps below.

Step 1 : Verify the following regarding the condition of the printer.

I) It is not currently printing



Step 2: Press the [F3] key of the operation panel.

I) To shift to the heater menu.



The 'heater message' can be one of the following:

- Heater standby
- o Heater warming up
- o Heater ready
- 'A' stands for the heater.
- 'B' stands for the fixer.
- 'C' stands for the post fixer.
- 'D' stands for the dryer.
- 'S' stands for the Set-temperature (requested temperature).
- 'R' stands for the Real-temperature (actual temperature).

4.4.2.1 Change the heater temperature

To change the temperature of the heater, press the [F1] key on the operation panel. The display will mention the following:



Press the [F2] key to decrease the temperature.

Press the [F4] key to increase the temperature.

Press the [ENTER] key to confirm the requested temperature change.

Press the [CANCEL] key to leave the menu without changing the heater settings.

4.4.2.2 Change the fixer temperature

To change the temperature of the fixer, press the [F2] key on the operation panel. The display will mention the following:



Press the [F2] key to decrease the temperature.

Press the [F4] key to increase the temperature.

Press the [ENTER] key to confirm the requested temperature change.

Press the [CANCEL] key to leave the menu without changing the heater settings.

4.4.2.3 Change the post fixer temperature

To change the temperature of the post fixer, press the [F3] key on the operation panel. The display will mention the following:



Press the [F2] key to decrease the temperature.

Press the [F4] key to increase the temperature.

Press the [ENTER] key to confirm the requested temperature change.

Press the [CANCEL] key to leave the menu without changing the heater settings.

4.4.2.4 Change the dryer temperature

To change the temperature of the dryers, press the [F4] key on the operation panel. The display will mention the following:



Press the [F2] key to decrease the temperature.

Press the [F4] key to increase the temperature.

Press the [ENTER] key to confirm the requested temperature change.

Press the [CANCEL] key to leave the menu without changing the rear heater settings.

4.4.2.5 <u>Activate/ deactivate heaters.</u>

In the second menu, press the [F1] key to activate or deactivate all heating elements.

In case the heating elements are activated, the display will mention "SET OFF". By pressing the [F4] key you can deactivate the heating elements. The display will mention "SET ON".

In case the heating elements are deactivated, the display will mention "SET ON". By pressing the [F4] key you can activate the heating elements. The display will mention "SET OFF".

Please note that after finishing a printing job (and no other print job is sent to the printer the heating elements will keep their temperature for approximately 6 minutes. After 6 minutes the heating elements are powered OFF.

4.4.3 Operating the Pressure Rollers

When you want to switch the up and down movement of the pressure rollers follow the steps below.

Step 1 : Press the [F4] key on the operation panel.

I) The printer works as follows.



Status of the printer	Operation after the [F4] key has been pressed
The pressure rollers have been lowered	The pressure rollers are lifted
The MEDIA SET lamp turns off.	The MEDIA SET lamp will turn on (orange).
The pressure rollers have been raised.	The pressure rollers are lowered.
The MEDIA SET lamp turns on (orange).	The MEDIA SET lamp will turn off.

⚠ Notes ⚠


You can also switch the up and down movement of the pressure rollers using the foot switch instead of the operation panel.

4.4.4 Print Mode Check

Use the following procedure to check the print mode currently set.

Step 1: Press the [ENTER] key on the operation panel.

I) The following information is displayed on the operation panel for three seconds.



No.	Position	Description	Reference
1	Line 2	The printing quality is displayed.	Refer to 'Printing quality menu'
2	Line 3	The interlace method is displayed.	Refer to 'InterLace Setup menu'
3	Line 4	The printing direction is displayed.	Refer to 'Printing direction menu'

Step 2: When the printing mode display closes, the product changes to its normal status.

4.5 CONTROL PANEL DURING PRINTING

When sending a file to your printer, following messages can be displayed.


4.5.1 Heaters are not Ready during Printing

When the heaters are not reached their target temperature, the following screen will be displayed.

```
F1 Wait Heating
Dist.Adj. Cleaning
A: HB: HC: HD:H
Heater Warming up
F4
```

Still, it is possible to start the print. However, the heater will continue to warm up in order to reach the requested temperature.

Step 1 : Press the F3 key to ENTER the HeaterStatus menu.



Step 2: Go to submenu 2/2 and press the F2 key to start the print.




4.5.2 Heaters are Ready during Printing

When heaters are ready, the printer will start printing. While printing, some actions can be taken.

1) On the fly step adjustments.

In case of overlapped printing images or white lines on printing image, the step should be adjusted.

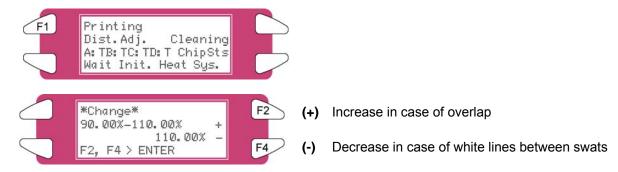

⚠ Notes ⚠

For more details about step adjustment, please refer to "Media Feed Compensation"

2) Cleaning

While printing, it could be possible that some nozzles drop out, in that case, perform a little, normal or powerful cleaning.

Please follow the steps below to perform a cleaning.

When there are some missing nozzles, a cleaning should be done. Depending on the quantity of missing nozzles and which head, a little, normal or powerful cleaning on head 1-2, head 3-4 or ALL could be done.

Step 1: Press the [F2] key of the operation panel.

I) To shift to the cleaning menu.



Step 2: Press the [F1] key or the [F2] key on the operation panel.

I) The product will perform following operations:

Setup items	Key name	Parameters	Description
Cut & Feed	F1	ALL, Head 1 – Head 2	Clean ALL heads or head couple one or two
	F2	Little, normal, powerful	Set the intensity of a cleaning

Step 3: Press the [ENTER] key to start the requested cleaning.

3) Adjust heaters


While printing, the heater values can be changed. For example: when noticing cockling.

Please follow the steps below to adjust the heater temperatures.

Step 1: Press the [F3] key



Step 2: Following screen will be displayed



Step 3: Change the value of one or more heaters or turn them all off.

⚠ Notes ⚠

For more details about heater adjustment, please refer to "Controlling the heater elements on the 8265/8290/8365/8390" printer"

4.6 OPERATIONS AFTER PRINTING

4.6.1 Cutting Media

The media cutting procedure is described below. Roll media is automatically cut after printing when "Auto" is set on the cut media menu and roll media has been set. When the operation panel is in the normal status, and the product is in the following conditions, the media can be cut on the desired position:


- When roll media has been set:
- If "OFF" is set on the cut media menu
- If "Take Up Roll" has been set in the media detection setup menu
- When sheet media has been set
- **Step 1:** Make sure that the MEDIA SET lamp on the operation panel is off.
- **Step 2:** Press the [F1] key on the operation panel.



Step 3 : Press the [F3] key on the operation panel to feed media to the desired position according to the procedure in "Feeding media".



Step 4: Press the [F1] key on the operation panel.



I) The media is cut at its position when the [ENTER] key has been pressed.

If the front edge of the roll media is not straight when you load new roll media, you should cut its edge. Cutting blades are consumable. Replace them at regular intervals following "Replacing the cutting blade".

5 TROUBLESHOOTING

5.1 INTRODUCTION

This chapter explains troubles that may occur when using the printer and how to solve them. If you encounter an error not described in this chapter, refer to "Error messages" and contact your local Xerox Customer Service Representative.

5.2 FAILURES AND MALFUNCTIONS OF THE PRINTER

This section describes the failures and malfunctions of the printer not displayed as errors, causes and solutions.

(1) The printer does not work after the power has been turned on.

No.	Possible cause	Solutions	Reference
1	You did not plug the power cable	Plug in the power cable.	
	in.		
2	The front cover is open.	Close the front cover.	Refer to 'Media handling'

(2) The printer does not work after media has been loaded.

No.	Possible cause	Solutions	References
1	The front cover is open.	Close the front cover	Refer to 'Media handling'
2	The pressure rollers have been raised.	Lower the pressure rollers lever.	Refer to 'Media handling'
3	You did not load the media straight into the printer.	Load the media straight into the printer.	Refer to 'Media handling'
4	You did not use recommended media.	Use recommended media.	Refer to 'Media type'
5	You used the printer in direct sunlight or other locations not appropriate for the specified environment.	Use the printer in the specified environment.	Refer to 'Product Specifications'

(3) The printer does not work after data has been sent from a computer.

No.	Possible cause	Solutions	Reference
1	Ink cassette is empty.	Replace the ink cassette.	Refer to 'Replacing ink cassettes'

(4) The printer does not print and an error is generated after data has been sent from a computer.

No.	Possible cause	Solutions	References
1	The model setting of the	Make sure that the model	Refer to the RIP User Guide.
	computer is not correct.	settings on computer and	
2	The interface setting or command	printer are the same.	
	mode on computer and printer do		
	not match.		

(5) Printouts are partially blurred or missing.

⚠ Notes ⚠

You may not obtain reasonable quality with media other than recommended media.

No.	Possible cause	Solutions	References
1	The media is damped.	Replace with new media.	Refer to 'Replacing media'
2	You used folded, creased or curled media.		
3	Check the media for curling or lift off.	Use the recommended media. When using media other than recommended media, set the following items in the media setting menu. Media HeadHeight Stiff	Refer to 'Media type' Refer to 'Menu Overview'

(6) Printing position is not correct (some positions are not printed.)

No.	Possible cause	Solutions	References
1	The loading position of the media is not correct.	Load the media correctly.	Refer to 'Loading media'
2	You used the scale or mirror setting.	Turn off the scale or mirror setting, or make the setting again.	Refer to 'Menu Overview'
3	You set the origin or starting position.	Turn off the origin or starting position setting, or make the setting again.	Refer to 'Menu Overview'

(7) Media jams occur frequently.

⚠ Notes ⚠

We cannot ensure correct media feeding with media other than recommended media.

No.	Possible cause	Solutions	References
1	You did not use recommended media.	Use recommended media.	Refer to 'Media type'
2	You used the printer in an environment other than the specified environment.	Use the printer in the specified environment.	Refer to 'Cautions on handling media'
3	You used old media.	Replace with new media.	Refer to 'Replacing media'
4	You used folded, creased, or curled media.		
5	Check the media for curling or lift-off.	Use the recommended media. When using media other than recommended media, set the following items in the media setting menu. • Media • HeadHeight • Stiff	Refer to 'Media type' Refer to 'Menu Overview'

(8) Roll media cannot be cut correctly.

No.	Possible cause	Solutions	References
1	The edge of the cutting blade is	Replace the cutting	Refer to 'Replacing the cutting
	not sharp.	blade.	blade'
2	The roll media has static	Remove the static	-
	electricity.	electricity on the roll	
		media.	
3	Media is too heavy to cut automatically.	Cut the media manually.	
	automatically.		

(9) You cannot perform initial ink charging.

No.	Possible cause	Solutions	References
1	The front cover is open or the	Close the front cover and	Refer to 'Media handling'
	hold lever is up.	lower the hold lever.	_
2	Some of the 8 ink cassettes are	Load all of the 8	Refer to 'Replacing ink cassettes'
	not loaded properly.	cassettes properly.	

(10) The media is off or damaged when loading it.

⚠ Notes ⚠

Remove the jammed or damaged media, referring to "When media jams occur".

No.	Possible cause	Solutions	References
1	You did not use recommended media.	Use recommended media.	Refer to 'Media type'
2	The loading position of the media is not correct.	Load the media correctly.	Refer to 'Loading media'
3	Foreign material, such a piece of media, is attached to the pressure rollers.	Clean the pressure rollers.	Refer to 'Cleaning the inside of the printer'
4	You used the printer in direct sunlight or other locations not appropriate for the specified environment.	Use the printer in the specified environment.	Refer to 'Product Specifications'
5	You loaded sheet media into the printer.	Set the CutSize setting to Length or Width.	Refer to 'Menu Overview'
6	You used folded, creased, or curled media.	Replace with new media.	Refer to 'Cautions on handling media'
7	Check the media for curling or lift-off.	Use the recommended media. When using media other than recommended media, set the following items in the media setting menu. • Media • HeadHeight • Stiff	Refer to 'Media type' Refer to 'Menu Overview'

(11) Media is damaged during media Initial.

⚠ Notes ⚠

Remove the jammed or damaged media.

No.	Possible cause	Solutions	References
1	You did not use recommended media.	Use recommended media.	Refer to 'Media type'
2	The loading position of the media is not correct.	Load the media correctly.	Refer to 'Loading media'
3	You did not load the media straight into the printer.	Load the media straight into the printer.	Refer to 'Loading media'
4	Foreign material, such a piece of media, is attached to the pressure rollers.	Clean the pressure rollers.	Refer to 'Cleaning inside the printer'
5	You used the printer in a location with air conditioner or other location not appropriate for the specified environment.	Use the printer in the specified environment.	Refer to 'Product Specifications'
6	You loaded sheet media into the printer.	Set the CutSize setting to Length or Width.	Refer to 'Menu Overview'
7	You used media folded, creased, damaged, tore, curled.	Replace the media.	Refer to 'Cautions on handling media'

(12) Tracing media or other thin media cannot be detected.

No.	Possible cause	Solutions	References
1	You did not use recommended media.	Use recommended media.	Refer to 'Media type'
2	You used the printer in direct sunlight or other locations not appropriate for the specified environment.	Use the printer in the specified environment.	Refer to 'Product Specifications'

(13) Media size is wrong during media Initial.

No.	Possible cause	Solutions	References
1	You did not use recommended	Use recommended	Refer to 'Media type'
	media.	media.	
2	You did not load the media straight into the printer.	Load the media straight into the printer.	Refer to 'Media handling'
3	The curled surface of media is up when loading.	Remove the curl in the media, or replace with new media.	Refer to 'Media handling'
4	You used the printer in a location with air conditioner or other location not appropriate for the specified environment	Use the printer in the specified environment.	Refer to 'Product Specifications'
5	You reused printed media.	Use new, not printed media.	Refer to 'Media type'

(14) Media is crooked while printing.

No.	Possible cause	Solutions	References
1	You did not use recommended	Use recommended	Refer to 'Media type'
	media.	media.	
2	The loading position of the media	Load the media correctly.	Refer to 'Loading media'
	is not correct.	_	

(15) The printer is not connected to a computer using the Centronics interface.

No.	Possible cause	Solutions	References
1	When the printing data is transferred from the computer, the DATA lamp on the operation panel is not lit.	If the DATA lamp is not lit, contact the computer maker.	-
2	The type of command that is currently set, does not match the command of a computer or a driver.	Match the command setting of the printer to the environment of a computer or a driver.	Refer to 'Menu Overview'

(16) The printed lines are blurred.

No.	Possible cause	Solutions	References
1	You did not use recommended media.	Use recommended media.	Refer to 'Media type'
2	You used too thick or too thin media.	Use recommended media	Refer to 'Media type'
3	You used bond media.	Use recommended media.	Refer to 'Media type'
4	The printed surface is not the printable side.	Pay attention to the printable side to load media correctly.	Refer to 'Media handling'
5	Did you try head cleaning?	Perform head cleaning. Perform strong cleaning. Clean the surface of the print head. Perform long save cleaning.	Refer to 'Head cleaning' Refer to 'Cleaning the cleaning wiper'

(17) White or black lines on printouts.

	No. Possible cause		Solutions	References
ſ	1	You did not use recommended	Use recommended	Refer to 'Media type'
		media.	media.	

(18) Lines are missing.

No.	Possible cause	Solutions	References
1	The validity date of the ink cassette has been expired.	Use a new ink cassette.	Refer to 'Replacing ink cassettes'
2	You did not use recommended media.	Use recommended media.	Refer to 'Media type'
3	Did you try minor adjustments for image quality?	Try minor adjustments for image quality.	Refer to 'Adjustments'

(19) "Bubbles" near the Heaters.

No.	Possible cause	Solutions	References
1	You did not use recommended	Use recommended	Refer to 'Media type'
	media.	media.	
2	You did not set the correct heater	Lower the temperature or	Refer to 'controlling the heater
		turn off the Heater	elements'

(21) Top Feed problem.

No.	Possible cause	Solutions	References
1	Media jam occurred due to a	Insert a minimum Top	Refer to 'Top Feed menu'
	need for Top feed.	Feed	

5.3 ERROR MESSAGES

This chapter explains the messages displayed on the operation panel both when the printer works normally and when an error occurs, and possible solutions.

5.3.1 Status Messages

The following are the status messages while the printer works normally.

(1) Displays the operational status (1)

The following operational status is displayed on the first line of the operation panel.



No.	Display	Solutions	References
1	Ready to print	Waiting for the next operation. (Media has been	-
		loaded.)	
2	Media End	The printer is waiting for the next operation.	Refer to 'Media
		(No media has been loaded into the printer.)	handling'
3	Receiving	The printer is receiving data.	-
4	Converting	The printer is converting data.	-
5	Printing	The printer is printing.	-
6	Warning Waste Ink	Replace the waste liquid tank.	Refer to 'Replacing
	Tank		the waste liquid
			tank'
7	Warning Ink Tube Life	Contact the dealer where you bought the printer	-
		or XEROX's technical support centre.	

(2) Displays of the operational status (2)

The following operational status is displayed between the first and the third line of the operation panel.



No.	Display	Solutions	References
1	Ink Refill **min	The printer performs ink charging. Wait for a	Refer to 'Installing
		while.	ink cassettes'
2	During cleaning **min	The printer performs head cleaning. Wait for a	Refer to 'Head
		while.	cleaning'
3	Media Initial ******	The printer performs initial setting of media.	Refer to 'Setting
		Wait for a while. Indicates the media type setting made.	media type'
4	During discharge	The printer performs head cleaning and ink	Refer to 'Changing
	Wait for a while	discharging. Wait for a while.	Ink Types'
5	During washing	The printer performs a head cleaning.	Refer to 'Changing
	Wait for a while	Wait for a while.	Ink Types'

5.3.2 Error Message Display and Solutions

The following are the message type error display and solutions. The following message type errors are displayed when an error occurs while operating the printer. When one of the following message type error displays appears, the printer may stop operation. If the printer stops operation, solve the problem to delete the error message and restart the printer.

(1) Error messages regarding media feeding

The following error message is displayed on the first line of the operation panel.



No.	Display	Descriptions	Solutions	References
1	Undefined	The printer failed to detect the	Reload the media.	Refer to 'Loading
	media	media.		media'
		(The printer stops.)		
2	Media Slant	The media was fed at an angle into	Reload the media.	Refer to 'Loading
		the printer.		media'
		(The printer stops.)		
3	End Of Roll	Roll media runs out.	Load new roll	Refer to 'Replacing
		(The printer stops.)	media.	media'
4	Cover Open	The front cover is open. (The printer	Close the front	-
		stops.)	cover.	
5	Please Set	The pressure roller has been	Set the media and	-
	Media	raised.	lower the pressure	
		There is no media.	roller.	
6	Media JAM	The media jammed.	Remove the	Refer to 'When
	Error	(The printer stops.)	jammed media and	media jams occur'
			reset a media.	

(2) Error messages regarding warnings of the remaining ink

The following error message is displayed on the forth line on the operation panel.



No.	Display	Descriptions	Solutions	References
1	Near End [*]	The ink is running short in the ink	Prepare a new ink	Refer to 'Replacing
		cassette.	cassette.	ink cassettes'
		(The printer continues to perform.)		

⚠ Notes ⚠

The [*] shows the colour of the ink causing the error according to the following codes:

- 1-8 : ink cassette slot number (Refer to 'Installing ink cassettes')
- All : All ink cassettes

(3) Other error messages

The following error message is displayed on the forth line of the operation panel



No.	Display	Descriptions	Solutions	References
1	Ink Status	Ink cassette(s) is (are) empty.	Replace the ink cassette(s)	Refer to 'Replacing
	Cassette [*]	(The printer stops.)		ink cassettes'
2	Ink Status	Initial filling has not been	Perform initial filling of the ink.	Refer to 'Installing
	No Filled [*]	performed.		ink cassettes'
3	No original ink	You did not load XEROX's	Load XEROX's	Refer to 'Replacing
		recommended ink cassette.	recommended ink cassette.	ink cassettes'
		(The printer stops.)	Reposition the smart-chip	-
		SmartChip is not well	(17.75 ± 0.5 mm from the	
		positioned on the cassette	right side and 43 ± 0.5 mm	
			from the bottom)	
4	4 Memory Status	Short of memory while	Consider increasing the	-
	NoMemory	converting or printing data.	memory capacity.	
	DIMM 64 MB			

⚠ Notes ⚠

The [*] shows the colour of the ink causing the error according to the following codes:

- 1-8 : ink cassette slot number (Refer to 'Installing ink cassettes')
- All : All ink cassettes

5.3.3 Data Error Display and Solutions

Following are data errors and possible solutions during printer operations. Data errors are displayed when a communication error occurs between computer and printer. If data error occurs, the following error messages are displayed and the printer stops. Solve the problem to delete the error message and restart the printer.



No.	Message	Descriptions	Solution	Reference
1	Online status	An error has occurred	Confirm the communication	Refer to 'Menu
	I** Error []	while receiving data.	condition between computer	Overview'
			and printer.	

⚠ Notes ⚠

*** In error messages are code numbers indicating what kind of error occurred.

5.3.4 Command Error Display and Solutions

Following are command error descriptions and possible solutions during printer operations. Command errors are displayed when an error has occurred while converting the command data sent from computer to printer. If a command error occurs, the following error messages are displayed and the printer stops. Solve the problem to delete the error message and restart the printer.



No.	Message	Descriptions	Solution	Reference
1	command status MH** Error []	Invalid command data is sent from computer.	Make sure that the settings of the computer and the printer	Refer to 'Menu Overview'
			match.	

∧ Notes ∧

- *** In error messages are code numbers indicating what kind of error occurred.
- [] may indicate the command code of the error.
- For the settings on a computer, refer to the computer's operation manual.

5.3.5 Error Requiring a Printer Restart

Following are descriptions and solutions requiring a restart. Errors requiring a restart are displayed when the following fatal error has occurred during printer operation.

- Foreign material disturbing the printer operation is involved in the printer.
- An electrical circuit (such as board, motor, or sensor) failure has occurred.
- An error on the control program has occurred.

If error requiring a restart has occurred, the printer prints and then stops (see below).

- (1) Power relating to the driving system is shut off automatically.
- (2) All indicator lights on the operation panel are turned on and beeps sound continuously.
- (3) An error message is displayed on the operation panel.

Press any key on the operation panel to stop the beep sounds.

If an error requiring a restart has occurred, solve the problems to restart the printer and delete the error. If the same error message is displayed again, contact your local XEROX dealer. Be sure to inquire the code numbers of the error messages.



No	. Message	Descriptions	Solutions	References
1	E System error*** OOOOOOOO	An error which cannot be solved promptly has occurred.	1. If foreign materials such as a piece of media or media dust are involved in the driving system, remove them. 2. Make sure that the replaced parts are correctly installed. 3. Power OFF the printer. After 10 seconds or more, power it back ON.	Refer to 'When media jams occur ' Refer to 'Replacing consumables'

For the settings on a computer, refer to the computer's operation manual.

^{***} In error messages are code numbers indicating what kind of error occurred.

^[] may indicate the command code of the error.

5.4 WHEN MEDIA JAMS OCCUR

If the loaded media gets jammed in the printer, follow the steps below to remove the media.


Step 1: Press [F4] to raise the pressure rollers.

∧ Notes ∧

For raising or lowering the pressure rollers, you can use the foot switch instead of the operation panel.

Step 2 : If a piece of media or media dust is stocked in the printer, open the front cover and remove the piece of media or media dust.

Be sure not to pinch your fingers while opening and closing media cover.

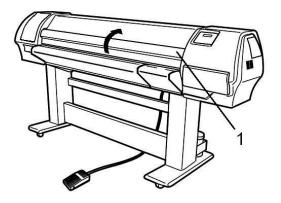

1 Front Cover

Step 3: If there is an error requiring a restart, power the printer OFF and ON again.

Step 4 : Go to Media Handling in the User Guide to re-load the media.

5 Troubleshooting		

This page has been intentionally left blank.

6 MAINTENANCE

6.1 INTRODUCTION

This chapter explains the necessary daily, weekly and monthly maintenance of the printer. Be sure to perform the recommended maintenance strictly. If not, Xerox does not guarantee constant printing quality.

6.2 8265/8290 PERIODIC MAINTENANCE

This section describes the periodic maintenance required for this machine. This maintenance helps ensure stable image quality. In the periodic maintenance, some service parts may be checked, cleaned, or replaced. Perform periodical inspections according to the table below.

	Maintenance cycles	
No°	Action	Frequency
1 2	Cleaning the edges of the caps and the area around the caps Cleaning around the bottom of the heads	Weekly Weekly
3	Cleaning the wipers	Bi-weekly
4 5	Replacing the wipers Replacing the sponge in the spitting box	Monthly Monthly
6	Change the upper sponge at the back of the capping station	Semi-Annual

⚠ Notes ⚠

- All cleaning in "Ink areas" must be done with Xerox 8265/8290 cleaning solution.
- Above maintenance cycle is based on use:
 - 8 hours / day, 5 days / week and 44 weeks / year.

If machine is used more, maintenance periods will come earlier.

Available kits for the end user and their order numbers

1. <u>User and good shape kit for 6 months</u>

No	Description	Quantity
1	Sponge plate	6
2	Wipers	24
3	Spitting box sponge	12
4	Cleaning Liquid 250 ml	3
5	Instruction sheet	1
6	Good shape kit	1

2. Good shape kit

No	Description	Quantity
1	Gloves	300
2	Pipette	12
3	Swabs	150
4	Polyknit wiper	300

3. Long store kit

No	Description	Quantity
1	Spitfire Mild Solvent Cleaning Liquid	8
	Ink kit	
	Black	2
2	Cyan	2
	Magenta	2
	Yellow	2

4. Solvent cleaning in a bottle

6.2.1 Weekly Maintenance

At the end of the week, ink has to be removed from some parts, so it cannot harden. Otherwise, some parts will break down or result in bad print quality. After performing a weekly maintenance, do not forget to perform the daily maintenance afterwards.

6.2.1.1 Cleaning the edge of the cap and the area around the caps


Step 1: Power ON the printer.

Step 2: Go to the H.Unlock Menu and press F2.


Step 3: Open the Front Cover.

Step 4 : Slide the carriage to the left to access the capping station.

Step 5 : Clean the edges of the caps with the cleaning swab.

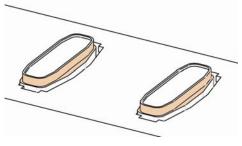

Step 6 : Clean the area around the caps with a poly-knit wiper. If you see ink, dust or some thing else, clean it immediately so it can not influence the print quality.

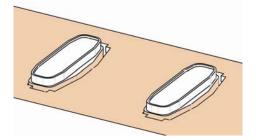


Step 7: Close the Front Cover.

Step 8: Press the [ENTER] key to exit the H.Unlock Menu. The carriage will cap in and be locked.

6.2.1.2 <u>Cleaning around the bottom of heads</u>

Step 1 : Open the left maintenance covers by removing the four screws.

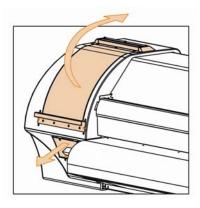

Step 2: Power ON the printer.

Step 3 : Go to the H.Unlock Menu and press the F2 key to unlock the carriage.


Step 4: Open the Front Cover.

Step 5 : Slide the carriage into the left maintenance area.

Step 6 : Clean the edges of the heads with a cleaning swab wetted by Eco-solvent Cleaning Liquid. Make sure you do not touch, clean the nozzle plate; this would lead to poorer print quality.

△ Caution △

- Make sure not to touch the nozzle plate. This could lead to poorer print quality.
- It is recommended to wear gloves (2) as shown on the picture below.

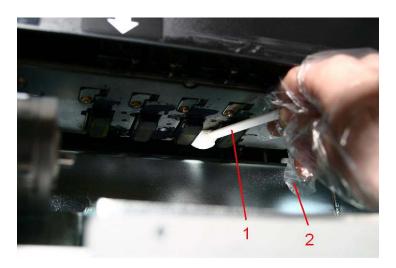

- 1 Cleaning Swabs
- 2 Gloves

Step 5: Close the Front Cover.

Step 6: Press the [ENTER] key to exit the H.Unlock Menu. The carriage will cap in and be locked

6.2.2 Bi-weekly Maintenance

6.2.2.1 <u>Cleaning the wipers</u>

Step 1: Power ON the printer.


Step 2: Go to the WiperClean Menu and press F2.

Step 3: Open the Front Cover.

Step 4 : Clean the wipers (4) with a poly-knit wiper. Use some Eco-solvent cleaning liquid to remove drops of ink.

△ Caution △

It is recommended to wear gloves.

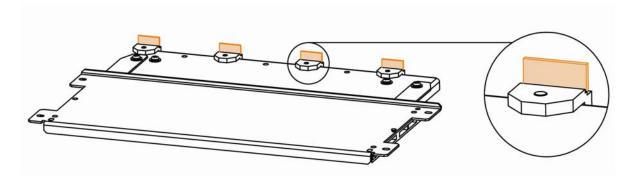

Step 5: Close the Front Cover.

Step 6: Press the [ENTER] key to exit the Wiper Clean Menu. The carriage will cap in and be locked.

6.2.3 Monthly Maintenance

6.2.3.1 Replacing the wipers

Step 1: Power ON the printer.

Step 2: Go to the WiperClean Menu and press F2.


Step 3: Open the Front Cover.

Step 4: Remove the old wipers with a pair of tweezers


Step 5: Before inserting a new wiper, moisten the wiper with Eco-Solvent Cleaning Liquid.



Step 6: Insert the moistened wiper with a pair of tweezers.

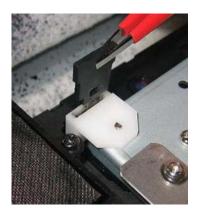

Be sure to insert the wiper correctly as shown below:





When standing in front of the machine.

Be sure that the wiper clicks in the wiper holder!



Step 7: Close the Front Cover.

Step 8: Press the [ENTER] key to exit the Wiper Clean Menu. The carriage will cap in and be locked.


⚠ Notes ⚠

- Be careful not to break the lips of the wiper arm while installing the wipers.
- Do not touch the wipers with your bare hands to avoid fat or dirt get in contact with the wipers and automatically the nozzle plate. Use a pair of tweezers to avoid this. Clean wipers with appropriate cleaning liquid in case of dirt.

6.2.3.2 Replacing the sponge in the spitting box.

⚠ Notes ⚠

- Use gloves and tweezers to change the absorbent in the flushing box.
- **Step 1:** Power ON the printer.
- **Step 2:** Go to the H.Unlock Menu and press the F2 key to unlock the carriage.
- **Step 3:** Open the Front Cover.
- **Step 4:** Slide the carriage to the left to access the flushing sponge.
- **Step 5 :** Remove the old flushing sponge with tweezers. (See image below)

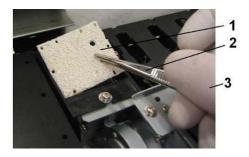


- 1 = Sponge
- 2 = Tweezers
- 3 = Gloves

Step 6: Install the new flushing sponge in the flushing box.

⚠ Notes ⚠

• Make sure that the 2 holes are on the right side of the flushing box and that the pins of the black box are in the holes of the absorbent.

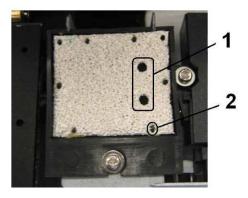

- 1 = Two holes
- 2 = Pin of black box
- **Step 7:** Close the Front Cover.
- Step 8: Press the [ENTER] key to exit the H.Unlock Menu. The carriage will cap in and be locked.

6.2.4 Semi-Annual Maintenance

6.2.4.1 Change upper sponge at back of the capping station.


Step 1: Power ON the printer.

Step 2: Go to the H.Unlock Menu and press F2.

Step 3: Open the Front Cover.


Step 4: Slide the carriage to the left to access the upper sponge.

Step 5: Remove the two screws fixing the sponge (1).

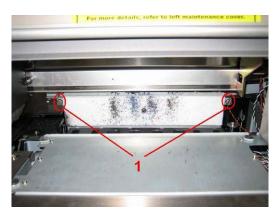

1 = Screws fixing the sponge (1)

Step 6: Replace the sponge and tighten it again to the plate with the two screws.

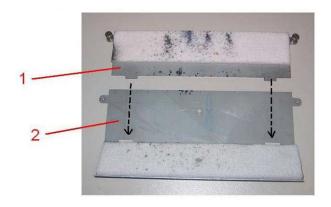

1 = Capping sponge

2 = Plate

Step 7: Close the Front Cover.

Step 8 : Press the [ENTER] key to exit the H.Unlock Menu. The carriage will cap in and be locked.

6.3 8365/8390 PERIODIC MAINTENANCE

This section describes the periodic maintenance required for this machine. This maintenance helps ensure stable image quality. In the periodic maintenance, some service parts may be checked, cleaned, or replaced. Perform periodical inspections according to the table below.

N	Action	Frequency
1 2 3	Clean wipers Tubing Flush and maintenance station cap flush Clean the edges of the caps in maintenance station	— Daily maintenance
4 5	Clean the area around the caps Clean around the bottom of the heads	— Weekly maintenance
	Clour around the bottom of the floads	
6	Replacing the sponge in the spitting box	Bi-weekly maintenance
7 8	Replacing the wipers Replacing upper sponge at back of the capping station	Monthly maintenance

⚠ Notes ⚠

- All cleaning in "Ink areas" must be done with Xerox 8365/8390 cleaning solution.
- Above maintenance cycle is based on use:
 8 hours / day, 5 days / week and 44 weeks / year.
 If machine is used more, maintenance periods will come earlier.

Available kits for the end user and their order numbers

5. <u>User and good shape kit for 6 months</u>

No	Description	Quantity
1	Sponge plate	6
2	Wipers	24
3	Spitting box sponge	12
4	Cleaning Liquid 250 ml	3
5	Instruction sheet	1
6	Good shape kit	1

6. Good shape kit

No	Description	Quantity
1	Gloves	300
2	Pipette	12
3	Swabs	150
4	Polyknit wiper	300

7. Solvent cleaning in a bottle

6.3.1 Daily Maintenance

Before every print, perform a nozzle check. If some nozzles are missing or misfiring, perform cleaning cycles until all nozzles are in good shape. We advise to run a normal or a powerful cleaning cycle to recover the nozzles.

At the end of the day, when you will shut down the printer, the ink has to be removed from some parts, so it cannot harden. Otherwise, some parts will break down or result in bad print quality.

⚠ Notes ⚠

In the box you will find a Good Shape Kit to perform the daily maintenance. Normally this is enough for 6 months. In case you're out of stock, you can order a new kit at Xerox Order Entry Department. Go to the consumables list on the Customer Documentation CD for the product code of the good shape kit.

6.3.1.1 Cleaning the wipers

Step 1: Power ON the printer.


Step 2: Go to the WiperClean Menu and press F2.

Step 3: Open the Front Cover.

Step 4 : Clean the wipers (4) with a poly-knit wiper. Use some Mild Solvent cleaning liquid to remove drops of ink.

△ Caution **△**

It is recommended to wear gloves.

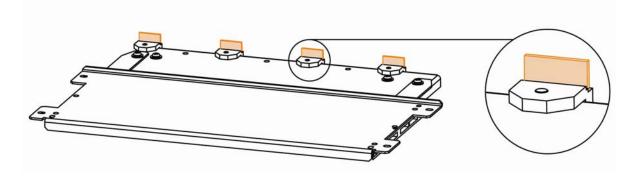

Step 5: Close the Front Cover.

Step 6: Press the [ENTER] key to exit the Wiper Clean Menu. The carriage will cap in and be locked.


6.3.1.2 <u>Tubing Flush and Maintenance Station Cap Flush</u>

Step 1 : Power ON the printer.

Step 2 : Go to SetupMenu 6/7 and press F4 to select TubingFlush.

Step 3: Open the front cover

Step 4: Use a pipette to flush the caps with Mild Solvent Cleaning Liquid. Flush the caps until the color of the mousse in the cap does not change anymore.

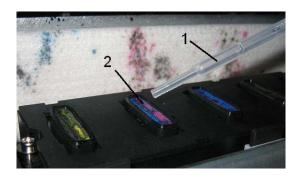

- 1 Pipette
- 2 Caps

Step 5: Close the Front Cover.

Step 6: To stop the tubing flush cycle press enter.

6.3.1.3 Cleaning the edge of the cap


Step 1: Power ON the printer.

Step 2: Go to the H.Unlock Menu and press F2.

Step 3: Open the Front Cover.

Step 4: Slide the carriage to the left to access the capping station.

Step 5 : Clean the edges of the caps with the cleaning swab.

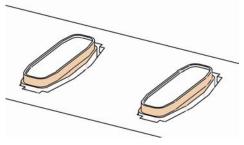

Step 6: Close the Front Cover.

Step 7: Press the [ENTER] key to exit the H.Unlock Menu. The carriage will cap in and be locked.

6.3.2 Weekly Maintenance

At the end of the week, ink has to be removed from some parts, so it cannot harden. Otherwise, some parts will break down or result in bad print quality. After performing a weekly maintenance, do not forget to perform the daily maintenance afterwards.

6.3.2.1 Cleaning the area around the caps


Step 1: Power ON the printer.

Step 2: Go to the H.Unlock Menu and press F2.

Step 3: Open the Front Cover.

Step 4: Slide the carriage to the left to access the capping station.

Step 5 : Clean the area around the caps with a poly-knit wiper. If you see ink, dust or some thing else, clean it immediately so it can not influence the print quality.

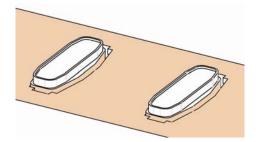


Step 6: Close the Front Cover.

Step 7: Press the [ENTER] key to exit the H.Unlock Menu. The carriage will cap in and be locked.

6.3.2.2 Cleaning around the bottom of heads

Step 1 : Open the left maintenance covers by removing the four screws.

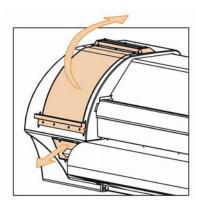


Step 2: Power ON the printer.

Step 3 : Go to the H.Unlock Menu and press the F2 key to unlock the carriage.

- **Step 4:** Open the Front Cover.
- **Step 5:** Slide the carriage into the left maintenance area.
- **Step 6 :** Clean the edges of the heads with a cleaning swab wet with Mild Solvent Cleaning Liquid. Make sure you do not touch, clean the nozzle plate; this would lead to poorer print quality.

- Make sure not to touch the nozzle plate. This could lead to poorer print quality.
- It is recommended to wear gloves (2) as shown on the picture below.

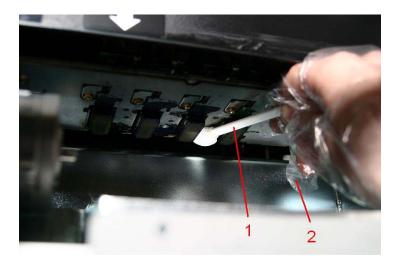


- 1 Cleaning Swabs
- 2 Gloves
- **Step 7:** Close the Front Cover.
- Step 8: Press the [ENTER] key to exit the H.Unlock Menu. The carriage will cap in and be locked

6.3.3 Bi-weekly Maintenance

6.3.3.1 Replacing the sponge in the spitting box.

⚠ Notes ⚠


- Use gloves and tweezers to change the flushing sponge in the flushing box.
- **Step 1:** Power ON the printer.
- **Step 2:** Go to the H.Unlock Menu and press the F2 key to unlock the carriage.
- **Step 3:** Open the Front Cover.
- **Step 4:** Slide the carriage to the left to access the flushing sponge.
- **Step 5 :** Remove the old flushing sponge with tweezers. (See image below)

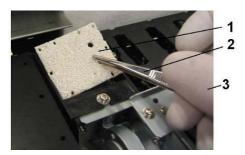

- 1 = Sponge
- 2 = Tweezers
- 3 = Gloves
- **Step 6:** Install the new flushing sponge in the flushing box.

⚠ Notes ⚠

 Make sure that the 2 holes are on the right side of the flushing box and that the pins of the black box are in the holes of the absorbent.

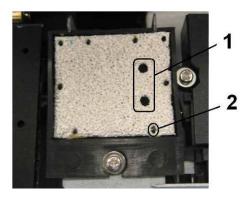

- 1 = Two holes
- 2 = Pin of black box
- Step 7: Close the Front Cover.
- Step 8: Press the [ENTER] key to exit the H.Unlock Menu. The carriage will cap in and be locked.

6.3.4 Monthly Maintenance

6.3.4.1 Replacing the wipers

Step 1: Power ON the printer.

Step 2: Go to the WiperClean Menu and press F2.

Step 3: Open the Front Cover.

Step 4: Remove the old wipers with a pair of tweezers


Step 5 : Before inserting a new wiper, moisten the wiper with Eco-Solvent Cleaning Liquid.



Step 6: Insert the moistened wiper with a pair of tweezers.



Be sure to insert the wiper correctly as shown below:

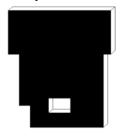



When standing in front of the machine.

Be sure that the wiper clicks in the wiper holder!



Step 7: Close the Front Cover.

Step 8: Press the [ENTER] key to exit the Wiper Clean Menu. The carriage will cap in and be locked.

∧ Notes ∧

- Be careful not to break the lips of the wiper arm while installing the wipers.
- Do not touch the wipers with your bare hands to avoid fat or dirt get in contact with the wipers and automatically the nozzle plate. Use a pair of tweezers to avoid this. Clean wipers with appropriate cleaning liquid in case of dirt.

6.3.4.2 Change upper sponge at back of the capping station.


Step 1: Power ON the printer.

Step 2: Go to the H.Unlock Menu and press F2.

Step 3: Open the Front Cover.


Step 4 : Slide the carriage to the left to access the upper sponge.

Step 5: Remove the two screws fixing the sponge (1).

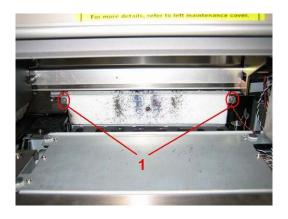

1 = Screws fixing the sponge (1)

Step 6 : Replace the sponge and tighten it again to the plate with the two screws.

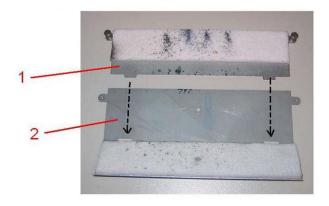

1 = Capping sponge 2 = Plate

Step 7: Close the Front Cover.

Step 8 : Press the [ENTER] key to exit the H.Unlock Menu. The carriage will cap in and be locked.

6.4 AUTHORIZED SERVICE PROCEDURES

N°	Action
1	Change dampers
2	Change pumps (*)
3	Change tubes from pumps -> Waste bottle
4	Change spitting box + tube + L connection
5	Change capping station
6	Change cap assembly maintenance station
7	Apply grease on head up-down cams when needed
8	Apply grease on Y-motor belt when needed
9	Apply grease on roller path – carriage when needed (**)
10	Apply grease on capping station camm + gears when needed
11	Dust removal in fan area underneath print platform

Maintenance			Month									
Action	1	2	3	4	5	6	7	8	9	10	11	12
1						X						X
2						X						Χ
3						X						Χ
4						Х						Χ
5												Χ
6						Х						
7						Χ						Χ
8						Х						Χ
9						Х						Χ
10						Χ						Χ
11						Χ						Х

⚠ Notes ⚠

- All cleaning in "Ink areas" must be done with Xerox cleaning solution.
- Above maintenance cycle is based on use: 8 hours / day, 5 days / week, and 44 weeks / year. If machine is used more, maintenance periods will come earlier.

6.5 REPLACING CONSUMABLES

This section explains when to replace ink cassettes, roll media, or the cutting blade and the procedures for replacement.

6.5.1 Replacing Ink Cassettes

Read the following for information on when and how to replace ink cassettes.

(1) Replacement time

Replace ink cassettes under the following conditions.

- a. The ink remaining in the ink cassette is low.
 - The following message is displayed on the operation panel.
 - o Printing operation is continued.
 - Prepare new ink cassettes before they are totally empty.



- b. The ink cassette becomes empty.
 - o The following message is displayed on the operation panel.
 - o Printing operation stops.
 - o Replace with a new ink cassette as soon as possible.



⚠ Notes ⚠

When the ink runs out or is low, the ink colour is indicated as follows:

- 1-8: The number of the ink cassette slot (Refer to 'Installing ink cassettes')
- All: All inks

(2) Types

- For detailed information on ink cassettes, refer to the following. Price List
- The printer is designed for use with 8265/8290/8365/8390 Ink cassettes. If you do not genuine products, printouts may become faint and the printer will not be able to detect the end of ink.
- The warranty will not cover (repairs will require a fee) a breakdown.

(3) Replacement procedure

△ Caution **△**

consult a doctor immediately.

- When handling ink cassettes, be careful that ink does not get in your eyes or on your skin.
 However, if this happens, flush immediately with water.
 Otherwise, your eyes may become congested or slightly inflamed. If you feel discomfort,
- Do not disassemble ink cassettes. Otherwise, ink may get in your eyes or on your skin.
- Only use 8265/8290/8365/8390 Ink and appropriate cleaning liquid.

⚠ Notes ⚠

Do not disassemble ink cassettes. Disassembled ink cassettes cannot be used

- Step 1: If the printer is turned on, make sure of the following
 - I) Printing or other operations are not performed.
 - II) Make sure that the display on the operation panel shows the normal state.
 - III) The MEDIA SET light on the operation panel goes off.
- **Step 2 :** Open the ink compartment cover.

△ Caution **△**

Be sure not to pinch your fingers while opening and closing the ink compartment cover.




1 Ink Compartment

Step 3: Remove the ink cassette from the ink cassette slot.

⚠ Notes ⚠

Dispose the used ink cassette by putting it in a plastic bag in accordance with local regulations or laws.

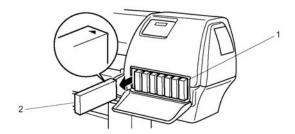

- 1 Ink cassette slot
- 2 Ink cassette


Step 4: Take the new ink cassette from its package.

⚠ Notes ⚠

Unpack the ink cassette just before installing it into the ink cassette slot. If you leave the cassette unpacked for a long time, the printer may not be able to print correctly. Use up ink cassettes within two years from the date printed on the cassette packages. Replace ink cassettes if after six months since installation.

Step 5 : Gently shake the ink cassette the install the ink cassette in the slot.

Step 6 : Close the cover of the ink compartment.

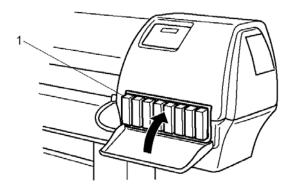

1 Ink Compartment

Step 7: Make sure that the display on the operation panel returns to normal status.

⚠ Notes ⚠

If you replace ink cassettes while printing, the printer resumes printing.

6.5.2 Replacing the Cutting Blade

Read following information on when and how to replace the cutting blade.

(1) Replacement time

Replace the cutting blade under the following conditions.

- a. Media cannot be cut cleanly
- b. The message "media Cut Error" appears on the operation panel if a media cutting error occurs.



c. When the cut edge has scuffing

(2) Replacement procedure

Follow the steps below to replace the cutting blade.

- **Step 1:** If the printer is turned on, make sure of the following
 - **I)** Printing or other operations are not performed.
 - **II)** Make sure that the display on the operation panel shows the "Ready to Print".
 - III) The MEDIA SET light on the operation panel is OFF.
- Step 2: Go to H.Unlock Menu and press F2.
- **Step 3:** Open the front cover.

⚠ Notes ⚠


Replace the cutting blade as quickly as possible. If you leave the carriage at the cutting blade replacement position, the head may be clogged with ink.

- **Step 4:** Slide the carriage to the middle of the platen.
- **Step 5 :** While pressing the cutting blade holder tab, rotate the cutting blade holder lever in the direction shown in the diagram.

∧ Notes ∧

Do not push the cutting blade holder tab strongly or release it suddenly. Doing so may cause the spring incorporated in the cutting blade holder to fly off.

Do not push in the cutting blade holder. Doing so may cause the cutting blade to damage the inside of the printer.

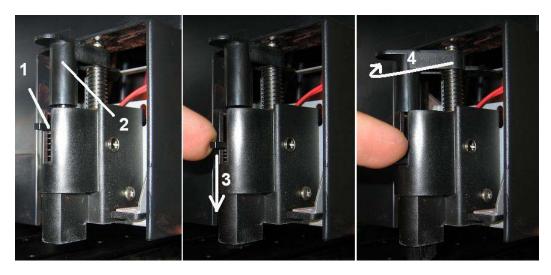


- 1 Cutting blade holder lever
- 2 Cutting blade holder

Step 6: Take out the cutting blade (1).

⚠ Notes ⚠

Do not touch the edge of the cutting blade to avoid injury.

Do not drop the cutting blade or apply it on hard material. Doing so may damage or break the cutting blade. Dispose the used cutting blade; put it in a plastic bag in accordance with local regulations or laws.

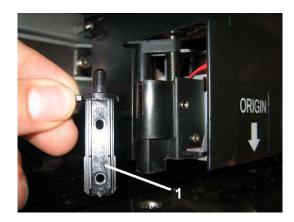

- **Step 7:** Insert the new cutter into the media cutting blade holder.
- **Step 8 :** While slightly pressing the cutting blade holder tab, return the cutting blade lever to its original position.
- **Step 9:** Close the front cover.
- Step 10: Press the [ENTER] key on the operation panel. The carriage returns to its original position.

6.5.3 Replacing the Waste Tank

Read following information on when and how to replace the waste liquid tank.

(1) Replacement Time

Replace the waste liquid tank under the following conditions.

- a. When the waste liquid tank is nearly full.
 - Following message is displayed on the operation panel.
 - Printing continues.
 - Prepare a new waste liquid tank before the waste liquid tank becomes full.



(2) Replacement Procedures

Follow the steps below to replace the waste liquid tank.

- **Step 1 :** Check the following if the power of the printer is ON.
 - I) Printer is not printing.
 - II) Operation panel is in normal status.
 - **III)** Media setting light on the operation panel is off.
- **Step 2:** Go to SetupMenu 6/7 and press F3 TankChg.
- **Step 3:** Open the cap of the waste liquid tank.

Do not bend or pull the waste fluid tube. Doing so may cause that the waste fluid will leak out and malfunction in the product.

Step 4: Remove the waste liquid tank from the tank tray of the stand.

∧ Notes ∧

Put the used waste liquid tank in a plastic bag and follow the local regulations when disposing.

- **Step 5**: Remove the cap on a new waste liquid tank and put the tank in the tank tray on the stand.
- **Step 6 :** Close the cap on the waste liquid tank.
- **Step 7:** Press the [ENTER] key on the operation panel.

6.6 CLEANING

You need to clean the printer periodically to keep it in best working condition.

- Do not insert or drop metal or inflammable objects into openings, such as ventilation outlets. Doing so may result in electrical shock and fire.
- Stop using your printer if a liquid is spilled into it. This may cause electrical shock or fire.
 Power the printer OFF as soon as possible, unplug the power cord and then contact your local XEROX dealer.

△ Caution △

- Be sure to power OFF the printer and unplug the power cable from the outlet before cleaning the printer.
- Do not use thinner, benzene, alcohol or other active agents. Doing so may result in damage or paint peeling from the casing.
- Be careful not to spill water inside the printer. Doing so may result in a short circuit.

Following are instructions for cleaning the printer.


6.6.1 Cleaning the Outer Case

(1) Cleaning frequency

Clean once a month.

(2) Cleaning procedure

Remove dust or smudges on the outer case with a soft cloth.

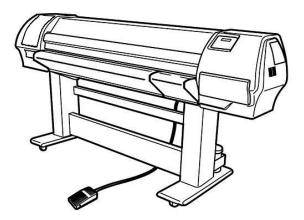

6.6.2 Cleaning the Inside of the Printer

(1) Cleaning frequency


Clean once a month.

(2) Cleaning procedure

The following are instructions for cleaning the inside of the printer.

Follow the steps below.

Step 1 : Open the front cover.

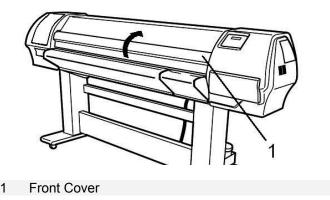

Step 2: Use a soft brush to carefully clean away any dust or dirt on the pressure rollers.

⚠ Notes ⚠

Do not blow off media dust inside the printer using an air dusting machine. Doing so may cause noise to occur from inside the printer.

Step 3 : Use a cloth soaked in cleaning liquid and squeezes it well, wipe off media dust and ink from the platen.

6.6.3 Head Cleaning

If printouts become faint or partially missed, perform head cleaning to clean the surface of the head and the nozzles. Follow the steps below to perform head cleaning.

⚠ Notes ⚠

Remove media before performing head cleaning.


If you perform head cleaning with media installed, the head may contact the media.

Step 1: Make sure that the state of the product is normal.

△ Caution **△**

Be sure not to pinch your fingers while opening and closing the front cover.

- Step 2: Refer to "TestPrinting" to perform nozzle check printing.
- **Step 3:** Check if the print head, referring to the diagram below.

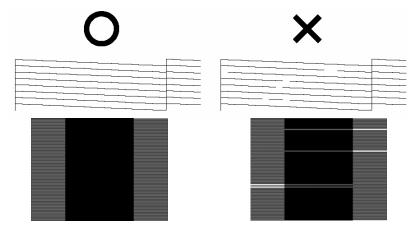

Step 4: Check the printer is in the normal status.



Step 5: Press the [F2] key on the operation panel.

I) The printer enters the cleaning menu.



Step 6: Press the [F2] key on the operation panel to change the parameters.

Key	Parameter	Description
F2	Small	Small cleaning is performed.
	Normal	Normal cleaning is performed.
	Strong	Strong cleaning is performed.

Step 7: Press the [ENTER] key on the operation panel to start the head cleaning.

⚠ Notes ⚠

If the [Cancel] key has been pressed instead of the [ENTER] key after changing the parameters, the printer returns to the normal status without performing a head cleaning.



Step 8: When the head cleaning has been completed, the printer returns to the normal status.

∧ Notes ∧

We advise to let the printer rest for 5-10 minutes after a head cleaning procedure. During that time, the 8265/8290/8365/8390 ink comes to a fully stabilized condition, improving print quality considerably.



Step 9 : Perform a nozzle check again and check the print head.

⚠ Notes ⚠

• When there are still some missing nozzles after some cleanings, it could be possible that the ink cycle is not completely airtight. To solve this moist the sides of the caps and perform a new cleaning.



- Moistening the caps can be done by unlocking the head with the TubingFlush menu.
- After moistening the caps perform another cleaning and NozzleCheck until no missing nozzles are established any more.

6.7 LONGSTORE PROCEDURE

The purpose of this procedure is to place the 8365/8390 in a storage condition by removing the ink in the ink lines and replacing it with cleaning liquid. It should be use to prepare the printer for transportation or whenever the printer will be left unattended for five days or more

6.7.1 Ready the Printer for LongStore

Step 1 : At the Printer Control Panel, go to the LongStore menu (SetupMenu 5/7 ► InkManager 2/2 ► LongStore ► F2)



Step 2: Press **F2 Yes**. The process consists of several cleaning loadings, several air loadings and one ink loading. The remaining time will be displayed on the Control Panel.

Me	ssage	Time
1.	Please remove cart.	
2.	Ink Discharge	
3.	Please insert Cleaning cart.	29
4.	During washing wait for a while	29
5.	Ink not filled [ALL]	
6.	Power OFF	

⚠ Notes ⚠

When a cleaning cassette is emptied during the Long Store procedure, remove the empty one and replace it by a new one. Only the last cycle will be repeated. Although, the full time (29 minutes) is mentioned again on the panel.

Step 3: After powering OFF the machine, the Waste Bottle tubes should be mounted on the nipple plate at the bottom of the machine. This will prevent air from entering into the ink lines and drying out the print heads.

6.7.2 Starting up after a LongStore

Me	essage	Time
1.	Power ON without Ink Cassettes installed.	
2.	Insert Cartridges	9
3.	Auto InkFill	

⚠ Notes ⚠

When powering ON and the ink cassettes are already installed, the message "Not Original Ink" will be displayed. Remove 1 and reinsert it to continue the procedure.

This page has been intentionally left blank.

7 ADJUSTMENTS

7.1 UNI-DIRECTIONAL ADJUSTMENT

The Uni-directional (Uni-D) Adjustment is used to align print head 2, 3 and 4 (Adjustment Head) to print head 1 (Reference Head) for uni-directional printing (right-to-left only). It should be performed whenever the printing environment or the media type is changed.


- **Step 1:** Power ON the printer and setup the media at the control panel.
- **Step 2 :** Print the Uni-D Test Print. At the control panel, navigate to Setup Menu 1/7 and select F3 TestPrint > F3 Adj. Uni-D.

There may be a slight delay between the time that the Uni-D Test Print is selected and the time that it actually prints.

Step 3 : Analyze the Uni-D Test Print. Beginning with Print Head 2, observe the lines for the Adjustment Head in relation to the Reference Head lines. Select the number (1-7), on left side of the test print, where the Reference Head and the Adjustment Head are best aligned.

For example, in the figure below, number "4" is where the Reference Head and the Adjustment Head are aligned the best for Print Head 2.

Alignment Uni-D

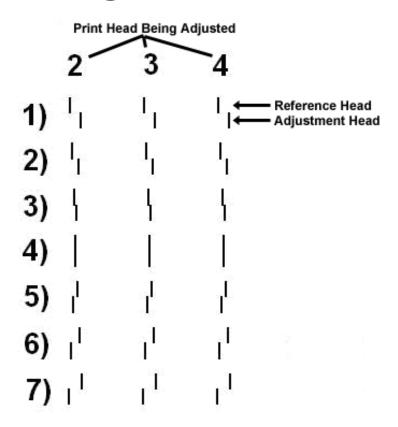

At the Control Panel, press either the F2 key or F4 key to select the number determined in the previous step.

Using the previous steps example, you would press either F2 or F4 to until the display read "4".



- **Step 4:** Press the [Enter] key on the control panel to set the Uni-D Alignment value for "Head 2".
- Step 5: Repeat steps 3 through 5 to set the Uni-D Alignment for Print Heads 3 and 4.
- **Step 6 :** Repeat step 2 and analyze the Uni-D Test Print. again. Verify that the Uni-D Alignment is successful. The test print should look similar to the test print example in Step 3.

If necessary, repeat the Uni-D Adjustment until the Uni-D Test Print looks similar to the test print example in Step 3.

7.2 BI-DIRECTIONAL ADJUSTMENT

The Bi-directional (Bi-D) Adjustment is used to set the timing of a print head when using bi-directional printing. It ensures that the left-to-right pass of the carriage (Adjustment Pass) is aligned with the right-to-left pass (Reference Pass). It should be performed whenever the printing environment or the media type is changed.


- **Step 1:** Power ON the printer and setup the media at the control panel.
- **Step 2 :** Print the Bi-D Test Print. At the control panel, navigate to Setup Menu 1/7 and select F3 TestPrint > F4 Adj. Bi-D.

There may be a slight delay between the time that the Bi-D Test Print is selected and the time that it actually prints.

Step 3 : Analyze the Bi-D Test Print. Beginning with Print Head 1A, observe the Adjustment Lines in relation to the Reference Lines. Select the number (1-7), on left side of the test print, where the Reference Line and the Adjustment Line are best aligned.

For example, in the figure below, number "4" is where the Reference Line and the Adjustment Line are aligned the best for Print Head 1A.

Alignment B1 - D

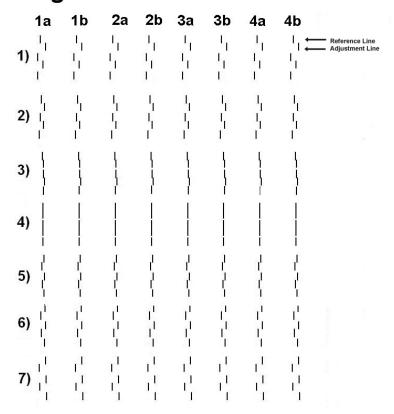

Step 4 : At the Control Panel, press either the F2 key or F4 key to select the number determined in the previous step.

Using the previous steps example, you would press either F2 or F4 to until the display read "4".



- Step 5: Press the [Enter] key on the control panel to set the Bi-D Alignment value for "Head 1A".
- **Step 6 :** Repeat steps 3 through 5 to set the Bi-D Alignment for the remaining Print Heads (1B, 2A, 2B, 3A, 3B, 4A, and 4B).
- **Step 7:** Repeat step 2 and analyze the Bi-D Test Print. again. Verify that the Bi-D Alignment is successful. The test print should look similar to the test print example in Step 3.

If necessary, repeat the Bi-D Adjustment until the Bi-D Test Print looks similar to the test print example in Step 3.

7.3 STEP ADJUSTMENT

A key factor in ensuring the consistent print quality on your Xerox 8265/8290 or 8365/8390 Wide Format Printer is setting the correct "Step" or "Feed" distance for the media type being used. The following procedure will allow you to check and, if necessary, adjust the "step" distance of your Xerox Inkjet Printer. It should be performed anytime you change the media type.


7.3.1 Print the Dist.Check Test Pattern

- **Step 1:** Power ON the printer.
- Step 2: Load the media on which you want to print.



Be sure to:

- Load the media straight.
- Attach the media to the front core of the printer (winder) when printing roll to roll. This is because the step adjustment value for roll to roll or roll to sheet is different.
- **Step 3:** Perform a nozzlecheck and any necessary cleanings until all nozzles are present.
- **Step 4 :** At the Control Panel press the **Cancel** button until Control Panel Screen displays "**Ready to Print**".
- **Step 5**: Press the **UP Arrow** Menu Key.
- Step 6: Press F3 Test Print.
- **Step 7:** Press the **UP Arrow** Menu Key.
- Step 8: Press F3 Dist. Check. The printer will start printing following test pattern:

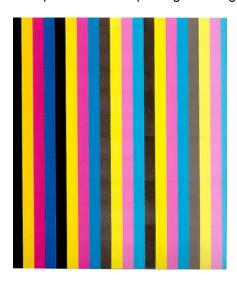


7.3.2 Evaluate the Dist. Check Test Pattern

Step 1 : To evaluate the print, you should look for gaps or overlaps between the different passes.


Examples

For print 1, the step is too small, overlap is visible.

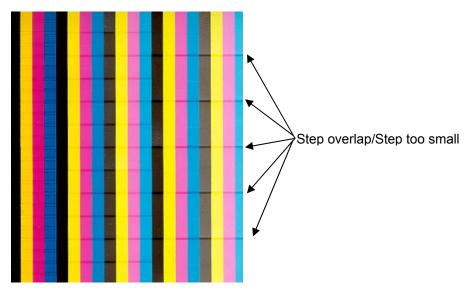

Print 1

For print **2**, the step is too big, there is a gap visible.

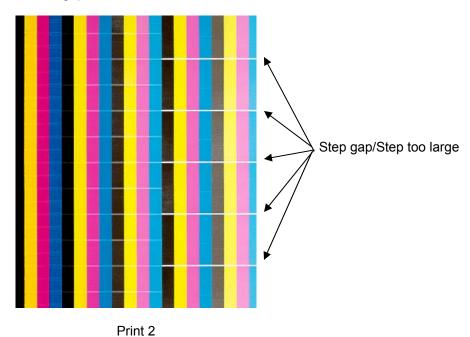

7.3.3 Modify the Step Adjust Printer Setting

- **Step 1 :** At the Control Panel press the **Cancel** button until Control Panel Screen displays "**Ready to Print**".
- Step 2: Press F1 Cut&Feed.
- Step 3: Press F2 Dist. Adj...
- **Step 4:** Change the Step Adjust Printer Setting:
 - a. If the Dist. Check Test Pattern has OVERLAP, as shown in Print 1, then you need to increase the Step Adjust Printer Setting. To do this:
 - i. Press the **F2 Key** to increase the Step Adjust Printer Setting %.
 - ii. Then press **ENTER**.
 - iii. Repeat 7.18.1 and 7.18.3 until there is no visible OVERLAP between the different passes in the test pattern.
 - b. If the Dist. Check Test Pattern has a GAP, as shown in Print 2, then you need to decrease the Step Adjust Printer Setting. To do this:
 - i. Press the **F4 Key** to decrease the Step Adjust Printer Setting %.
 - ii. Then press ENTER.
 - iii. Repeat 7.18.1 and 7.18.3 until there is no visible GAP between the different passes in the test pattern.



This page has been intentionally left blank.

8 APPENDIX

8.1 PRODUCT SPECIFICATIONS

Technology		Drop-on-demand Micro Piezo Inkjet Technology.			
		Variable drop mass output between 5.4 ng and 41.5 ng			
Media Thickness Compensation		Automatic media thickness compensation.			
·		Variable – RIP controlled – Head Height			
Maximum Media Widths		2280 mm			
Maximum Print Wid	ths	2250 mm			
Media	Thickness	Range: 0.08 mm – 1.1 mm			
	Diameter	Maximum: 300 mm			
	Core	2" or 3"			
	Weight	Maximum: 100 kg			
Colour Channels		8 colour channels – 4 process colour output			
		8265/8290/8365/8390 2xCMYK speed set-up			
Inks		8265/8290/8365/8390 CMYKLcLm photo tone rendering set-			
		up			
Ink Cassette Capac		220 ml or 440ml			
Print Modes & Pane	el Control Options	Uni & Bi-directional output, Interweaving, Mirror Output, Multi			
		Copy, Ink Status, Origin Control			
LCD Display		Backlight LED – 4 lines x 20 characters			
Take-up System (st	andard)	Automated			
Roll Media Core		2" & 3"			
Interface		Ethernet 10/100 auto			
Power Consumption	1	1400 VA			
·		100 VA in stand-by mode			
	s in mm (W x D x H)	3700 x 750 x 1250			
Weight		± 400 kg			
Power Supply		AC 100 – 120 V / AC 220 – 240 V auto-switching			
Working Environment		Temperature: 18 – 28 °C			
		Humidity: 40 – 80 % (no condensation)			
Noise Level		Operating: 54 dB or less			
Standard		CE			
Optional Item		Air Purification System			
RIP Specifications		See the RIP User Documentation			

8.2 NETWORK INTERFACE SPECIFICATIONS

Item	Specifications					
NetWork Type	Ethernet IEEE802.3					
NetWork I/F	10 Base-T,100 Base-TX(automatic switching)					
	(RJ-45 connector, twisted pair cable, category 5)					
Protocol	TCP/IP					
Functions	Automatic protocol recognition					
	 Transmission speed up to 4 MB/s 					



This page has been intentionally left blank.

Prepared by: Xerox Corporation Global Knowledge and Language Services 800 Phillips Road, Bldg. 0218-01A Webster, New York 14580-9791 USA

©2008 by Xerox Corporation. All rights reserved.

Copyright protection claimed includes all forms and matters of copyrightable material and information now allowed by statutory judicial law or hereinafter granted, including without limitation, material generated from the software programs which are displayed on the screen such as icons, screen displays, looks, etc.

Printed in the United States of America.

XEROX® and all Xerox product names mentioned in this publication are trademarks of XEROX CORPORATION. Other company trademarks are also acknowledged.

PANTONE is a registered trademark of Pantone, Inc.

Changes are periodically made to this document. Changes, technical inaccuracies, and typographic errors will be corrected in subsequent editions.